
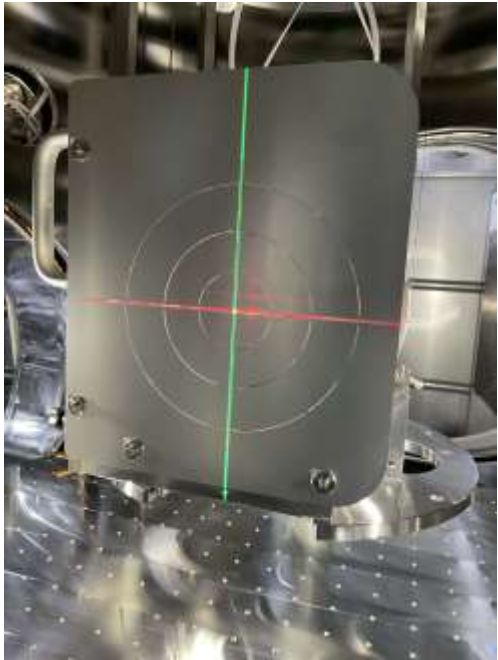
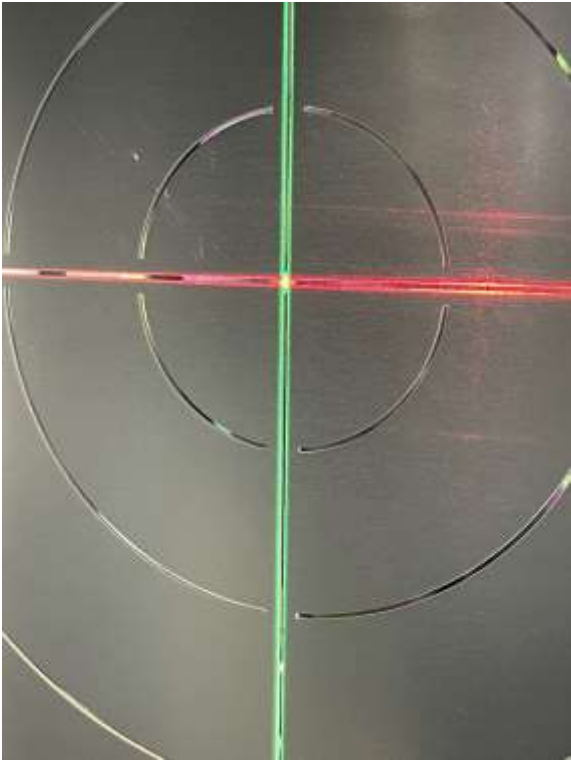


3. Set the target at PR2 HR side, and align target plate to the vertical laser.(horizontal too)

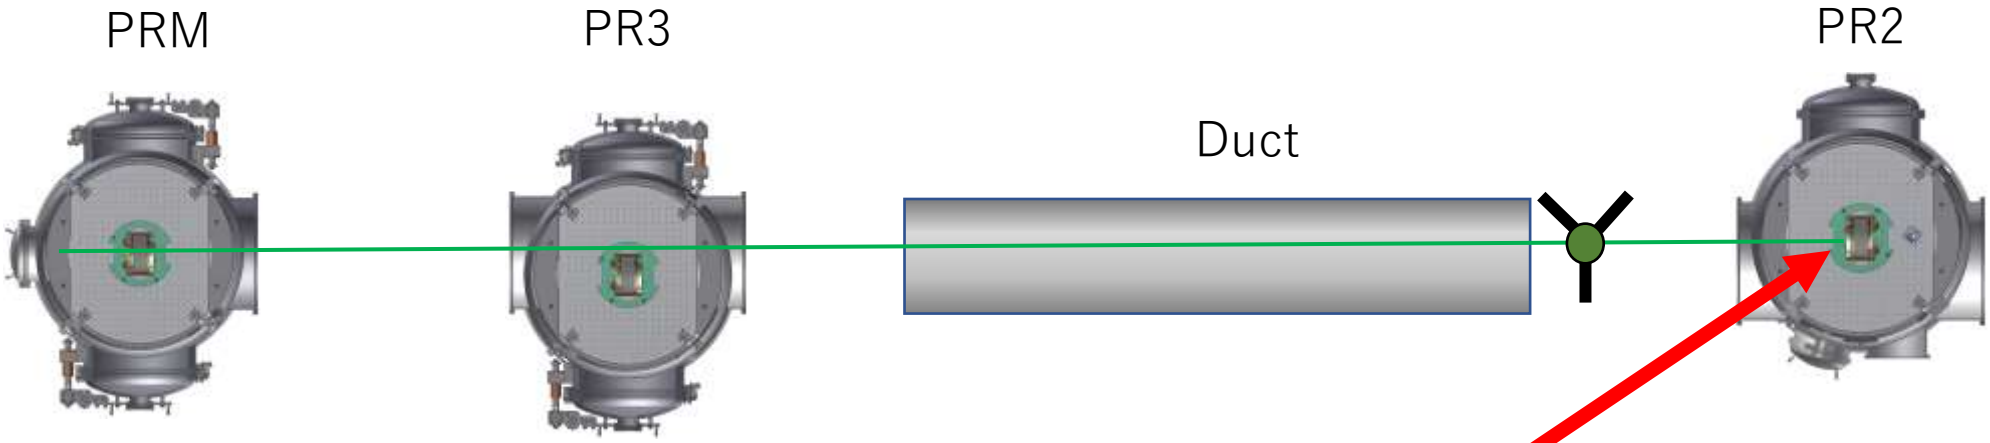

HR side