



3. Set the target at PR3 HR side, and align target plate to the vertical laser.(horizontal too)

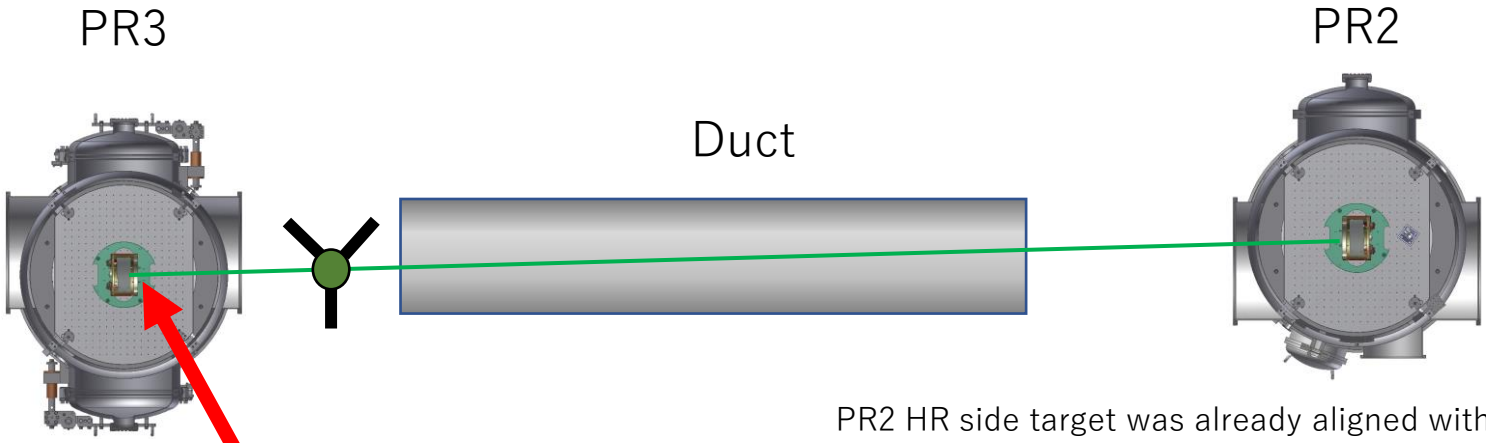

PR2 HR side target was already aligned with PR2-PRM line.

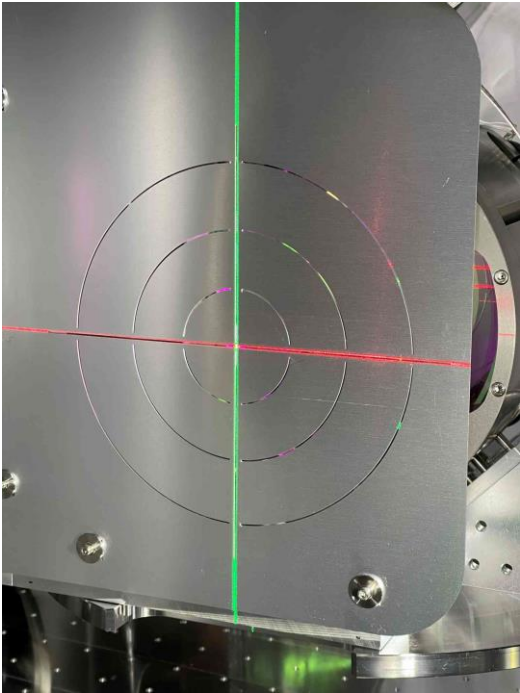

HR side

