
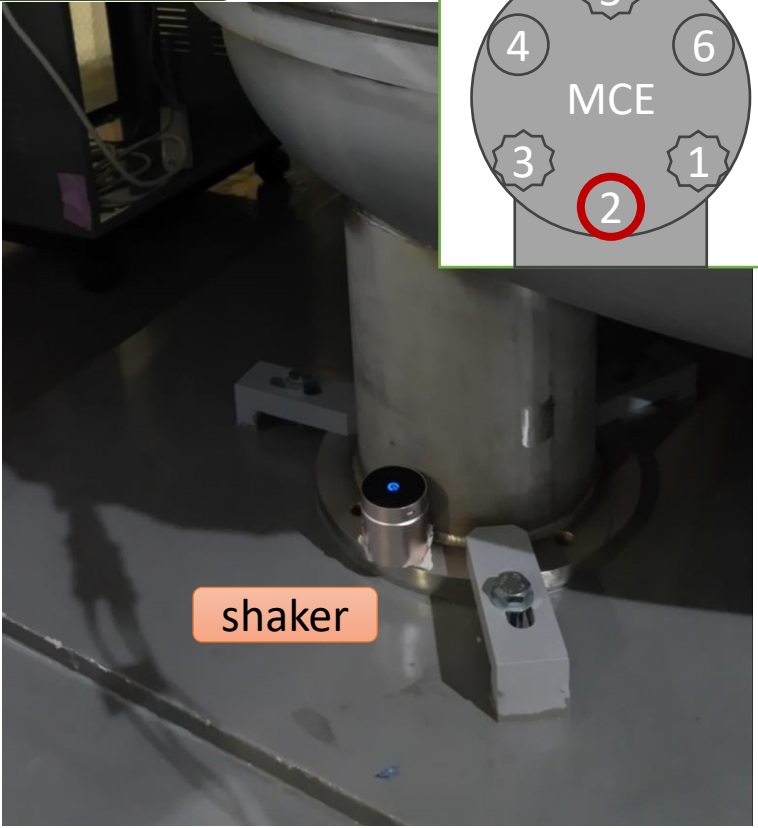


MCE leg2

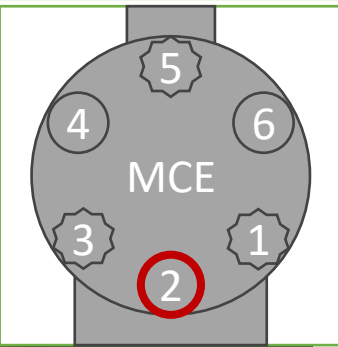

shaker

Start



Pause



Resume


Abort




Repeat










Fourier tools

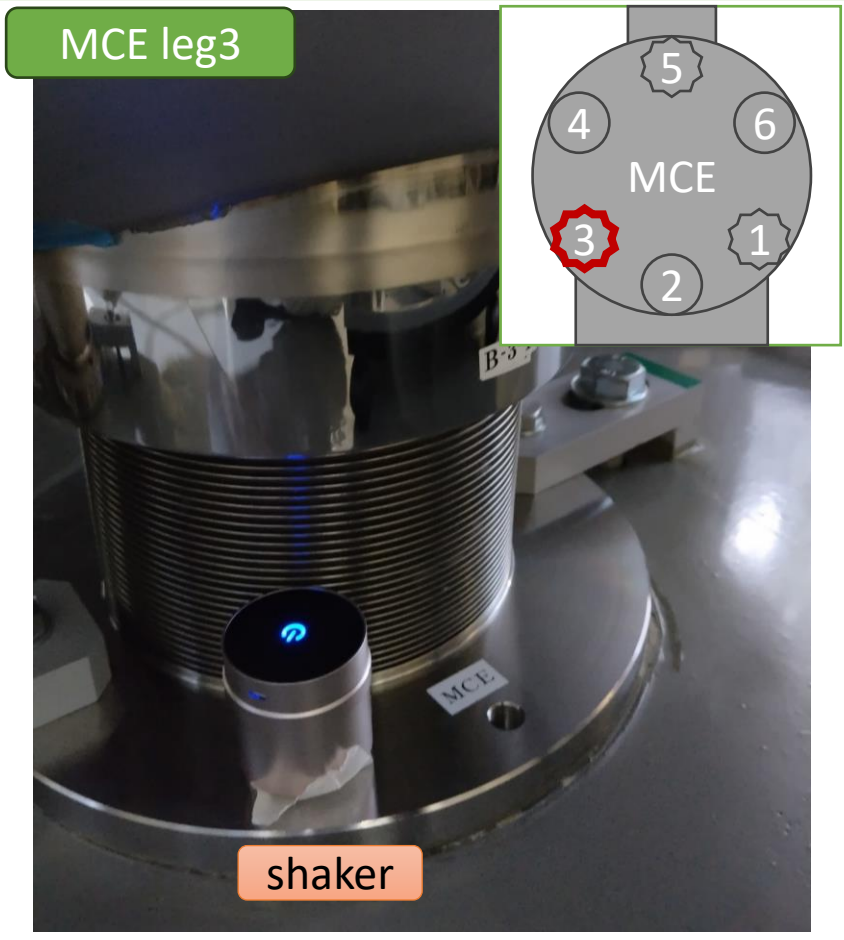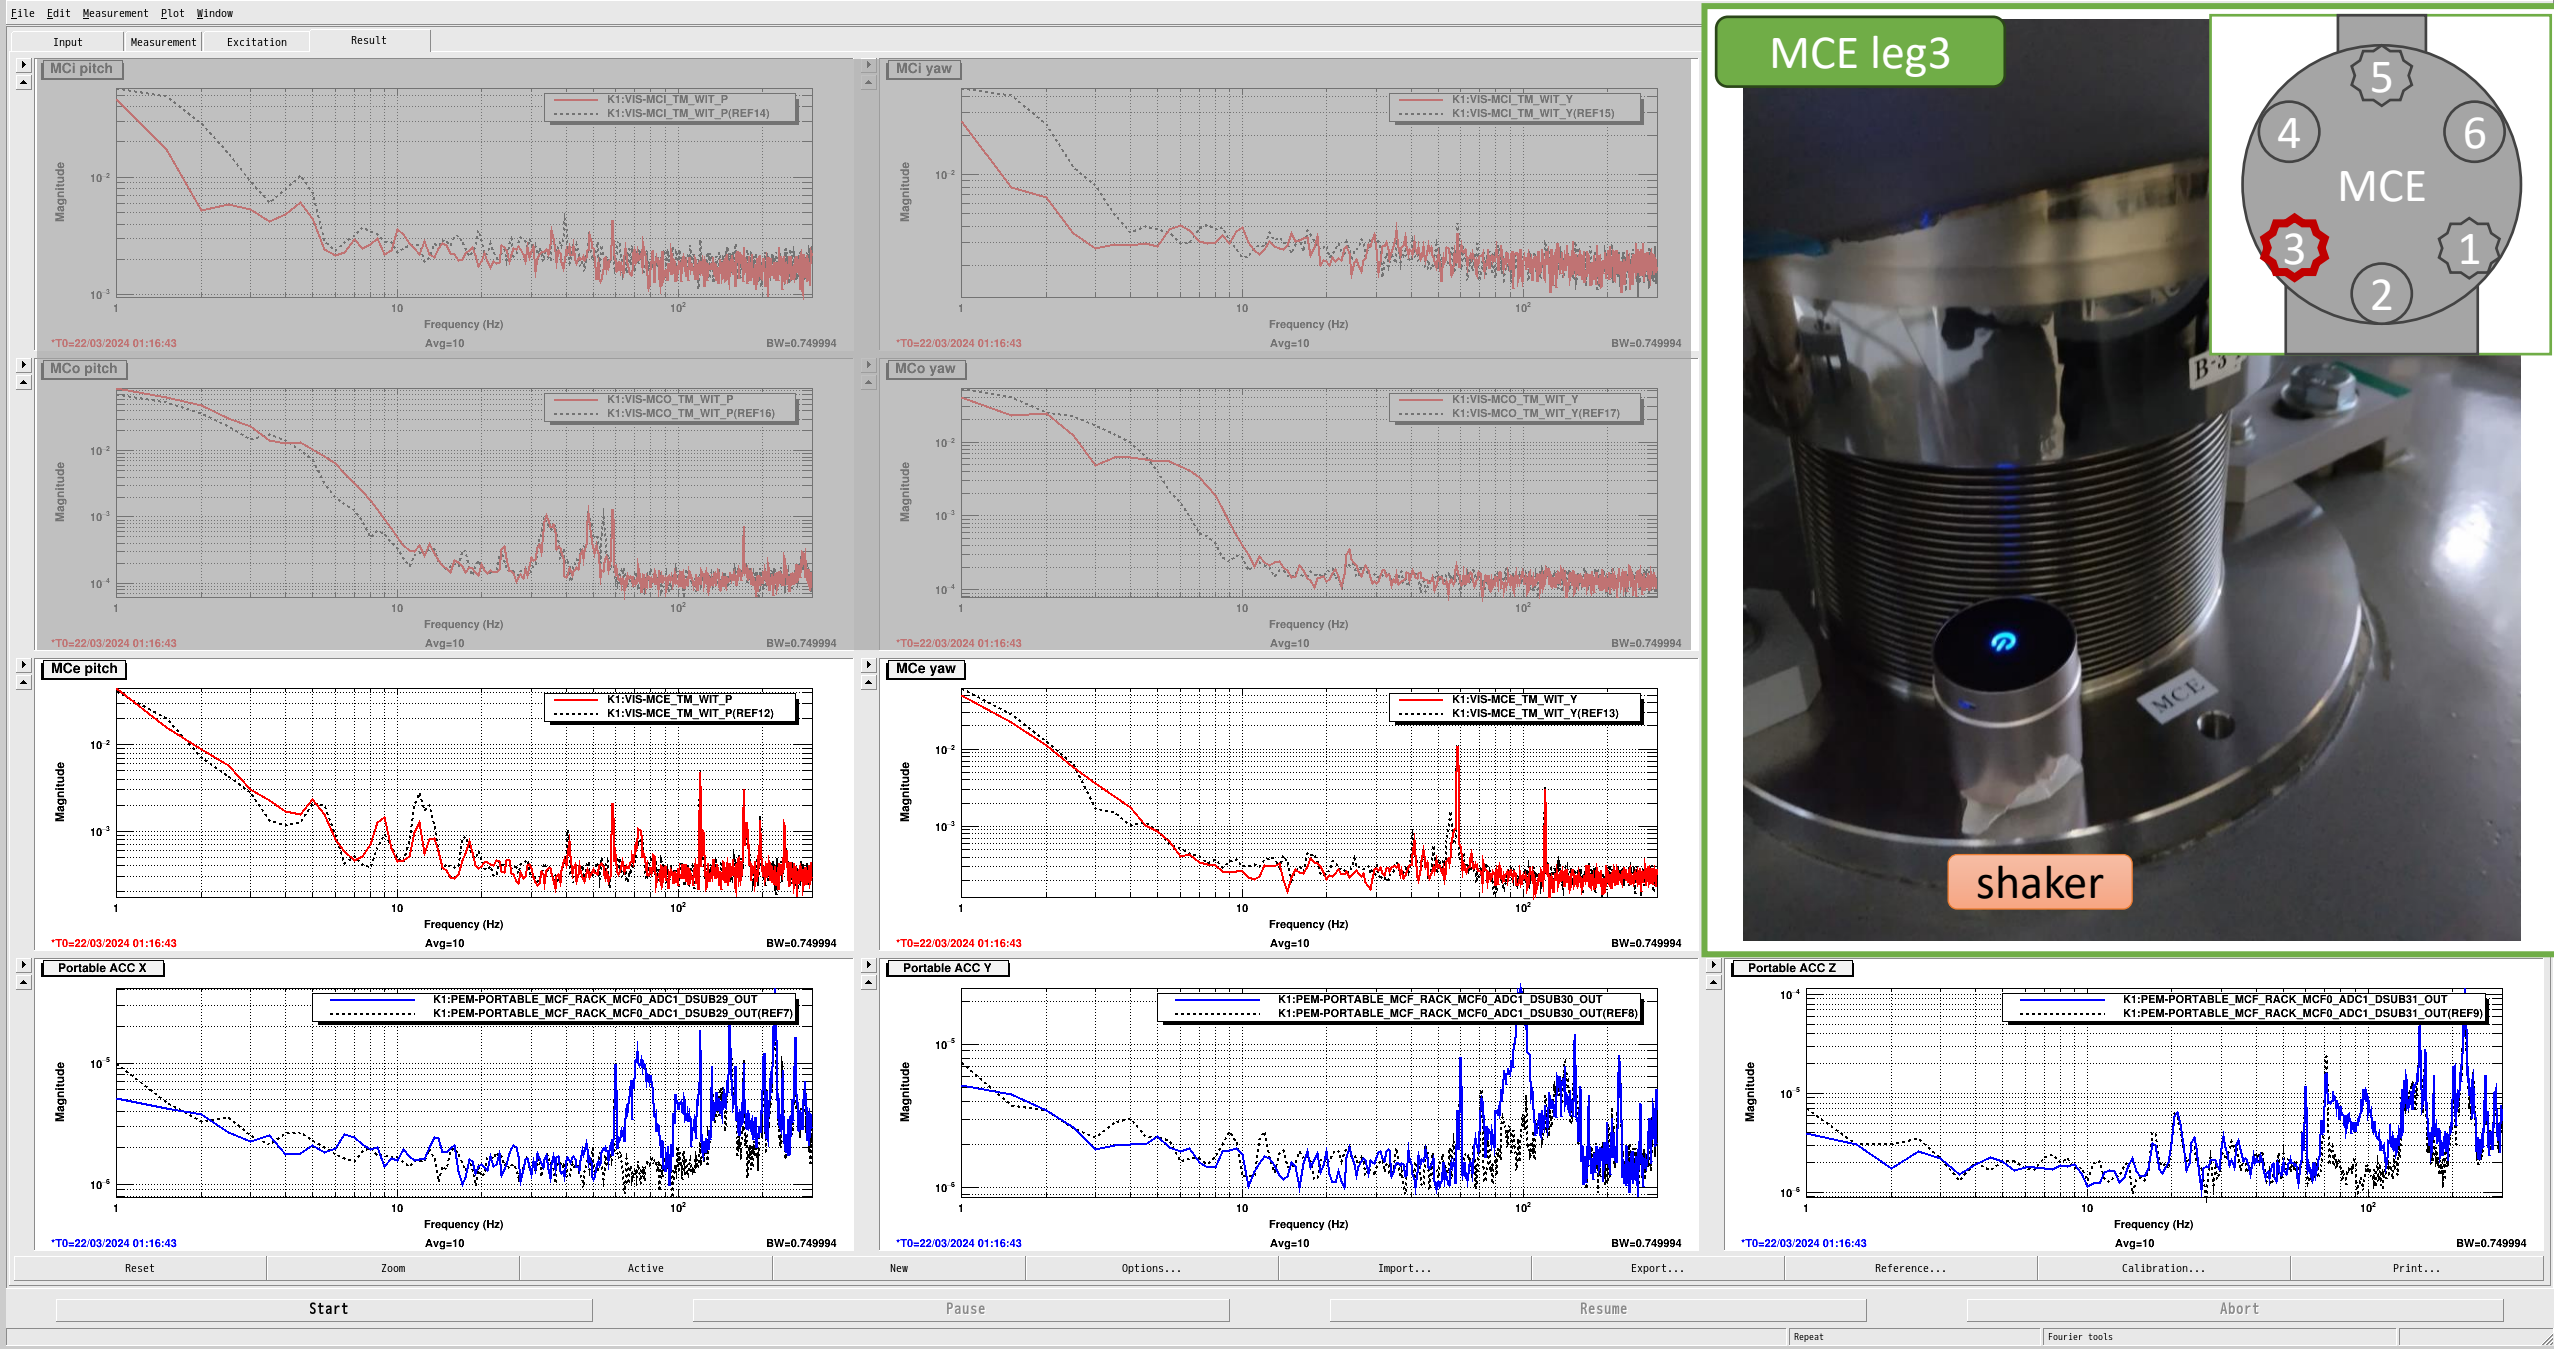


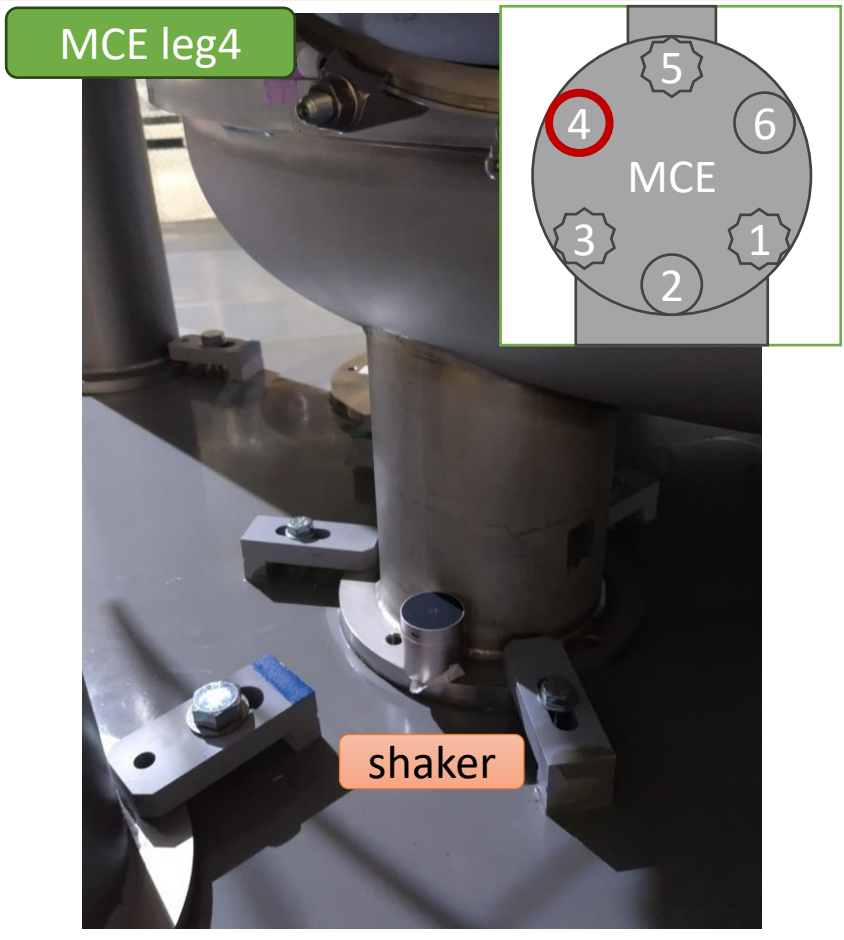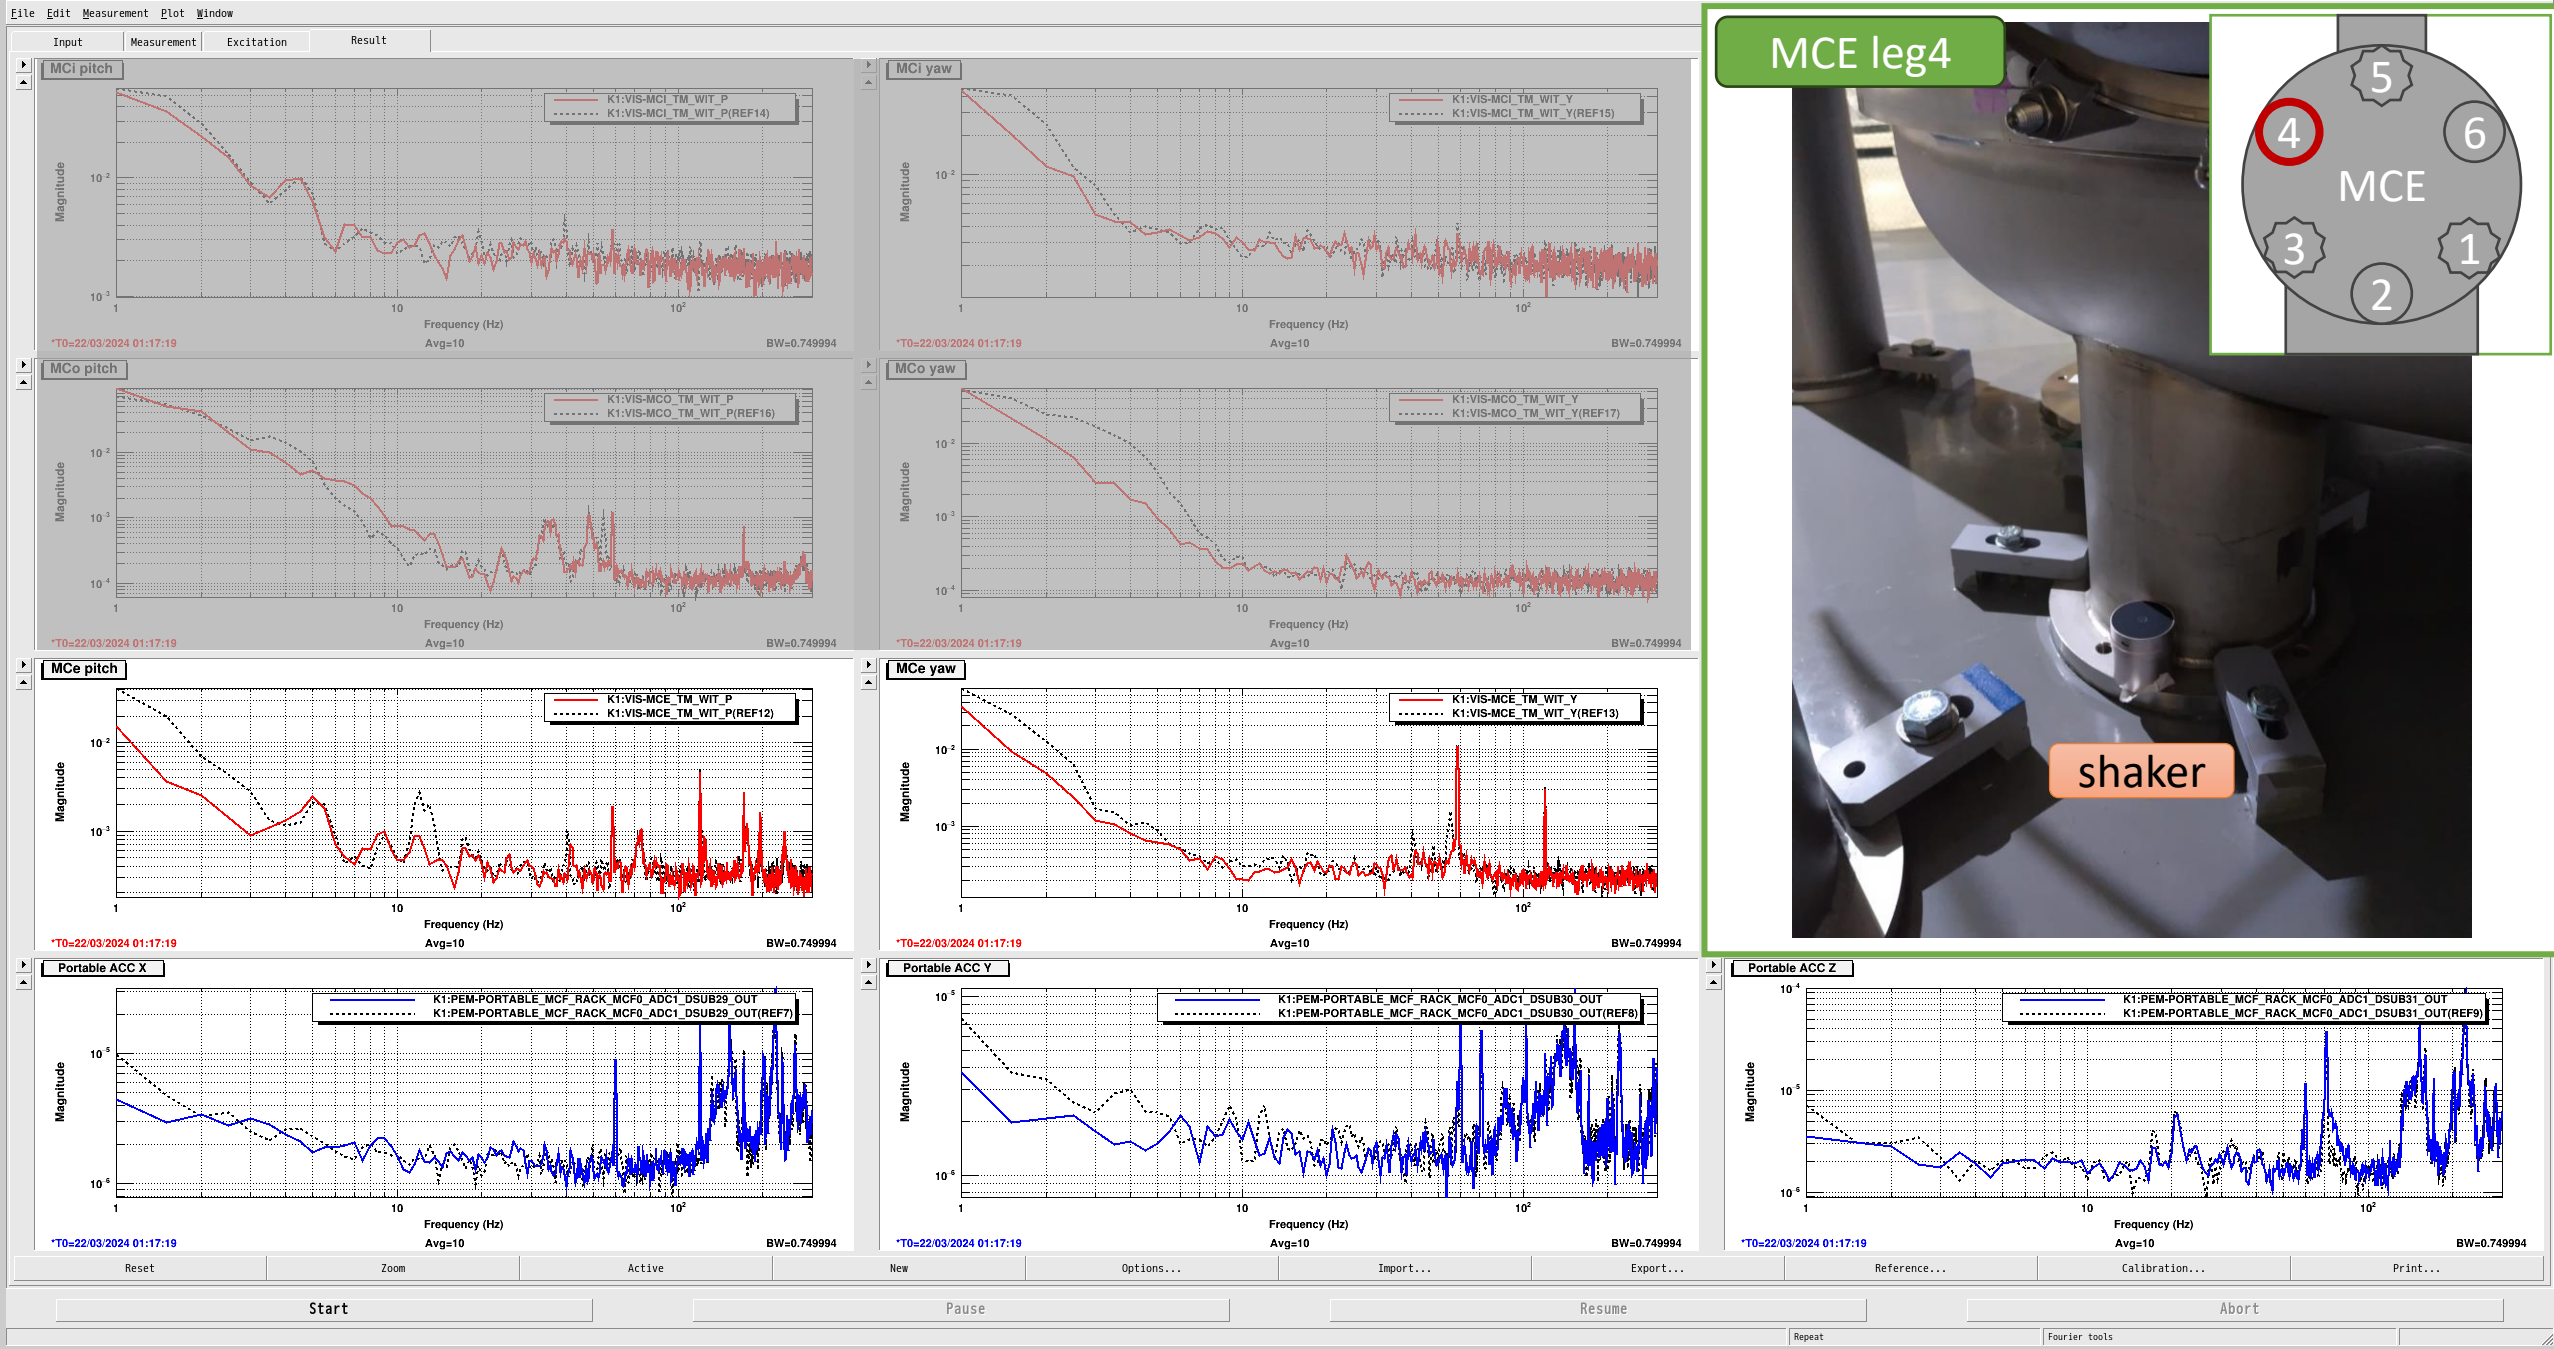


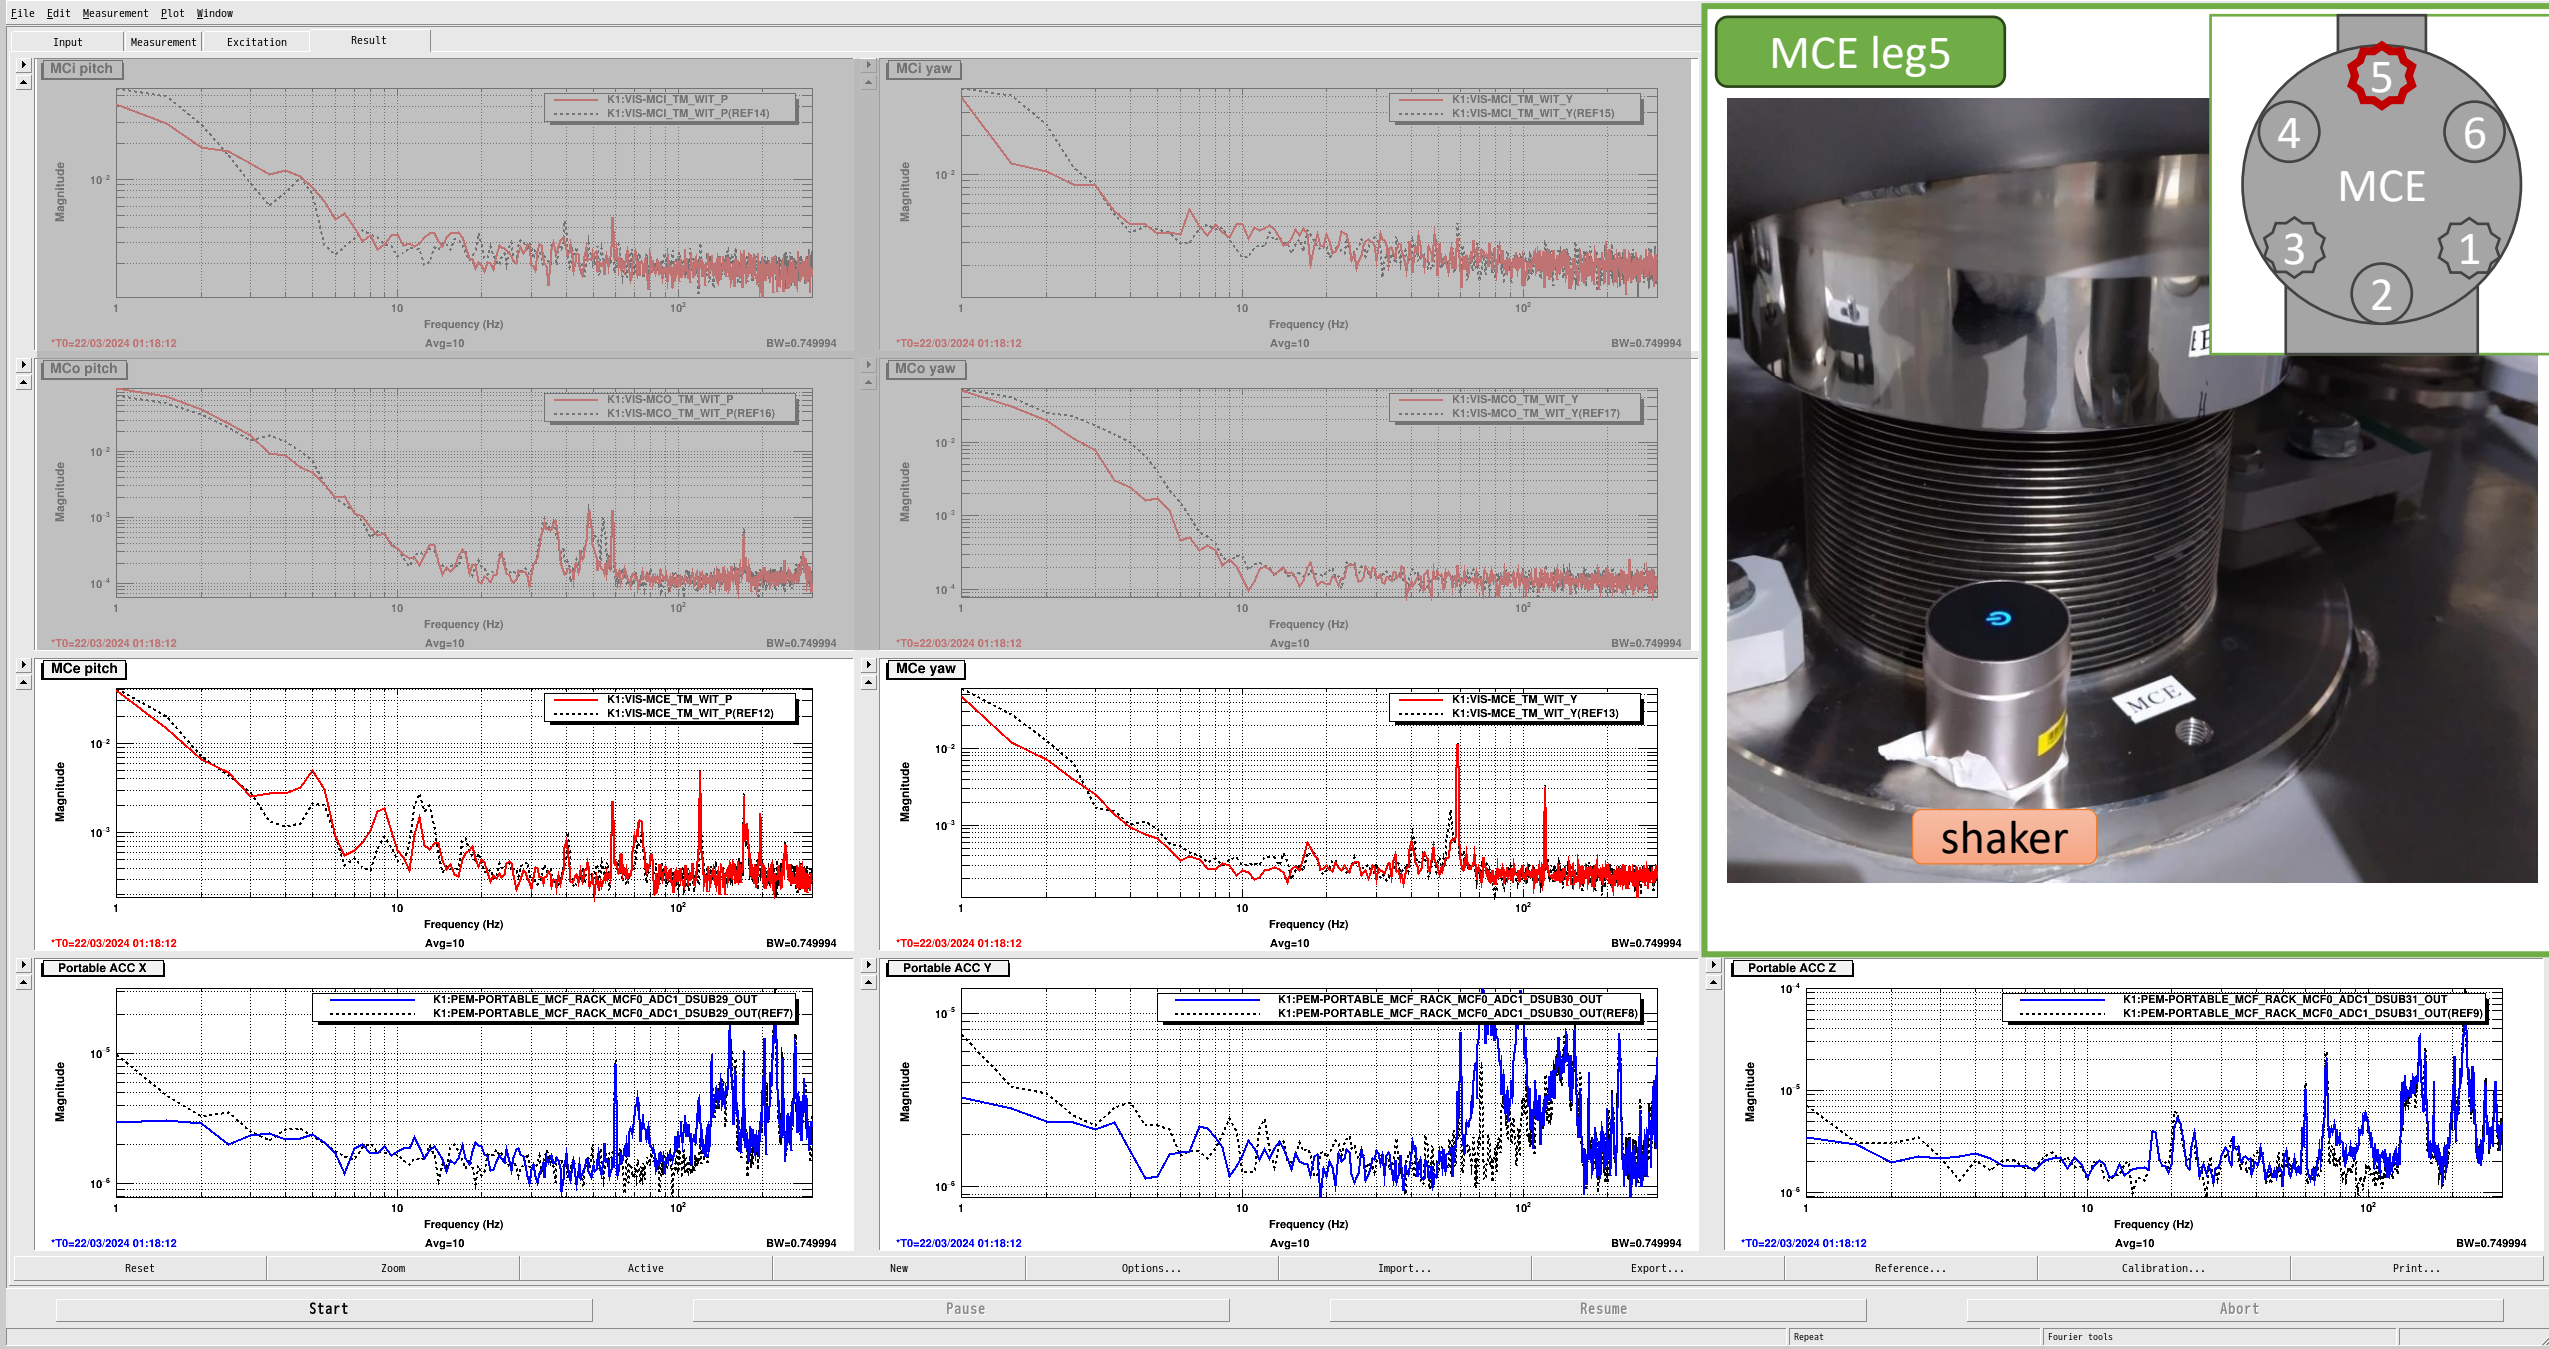


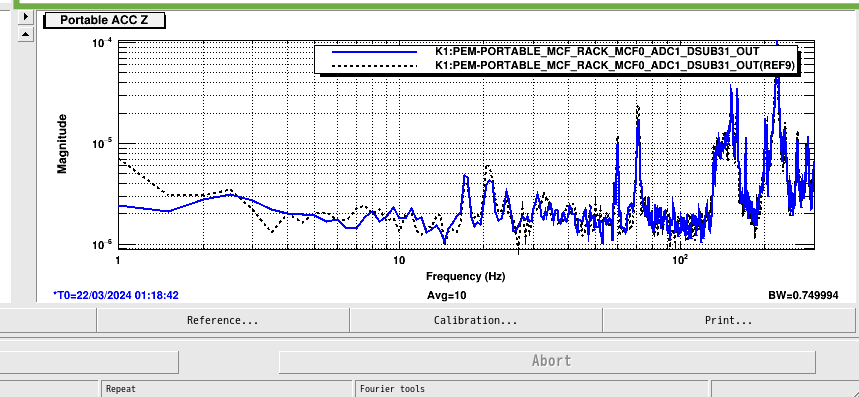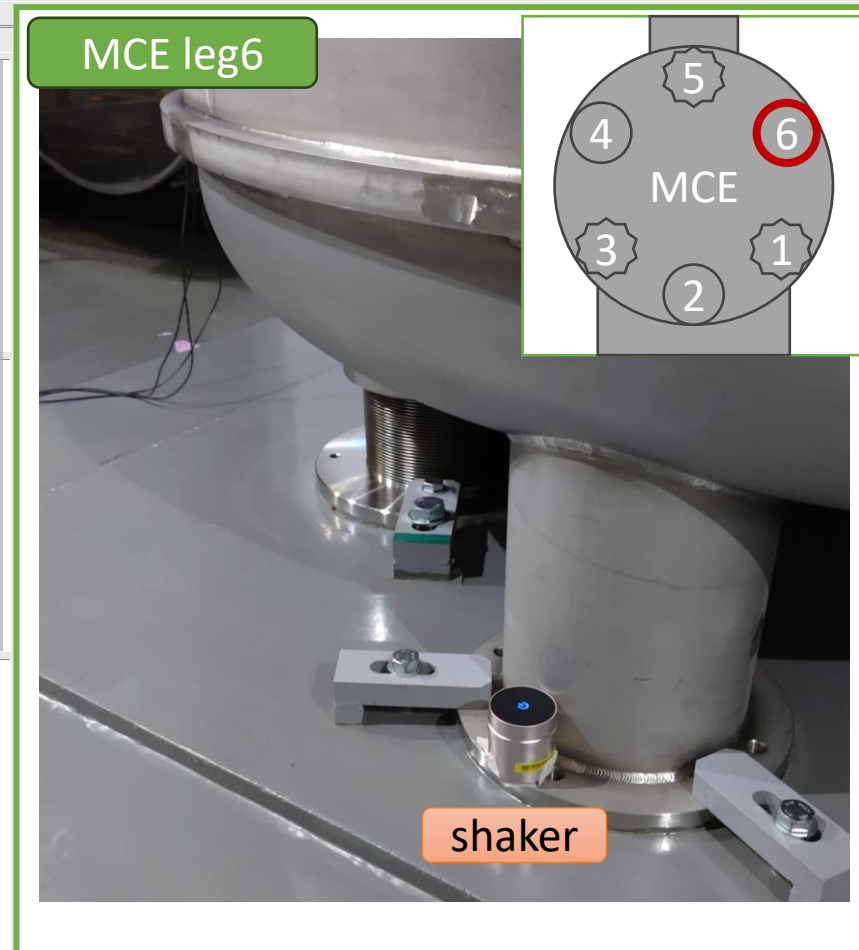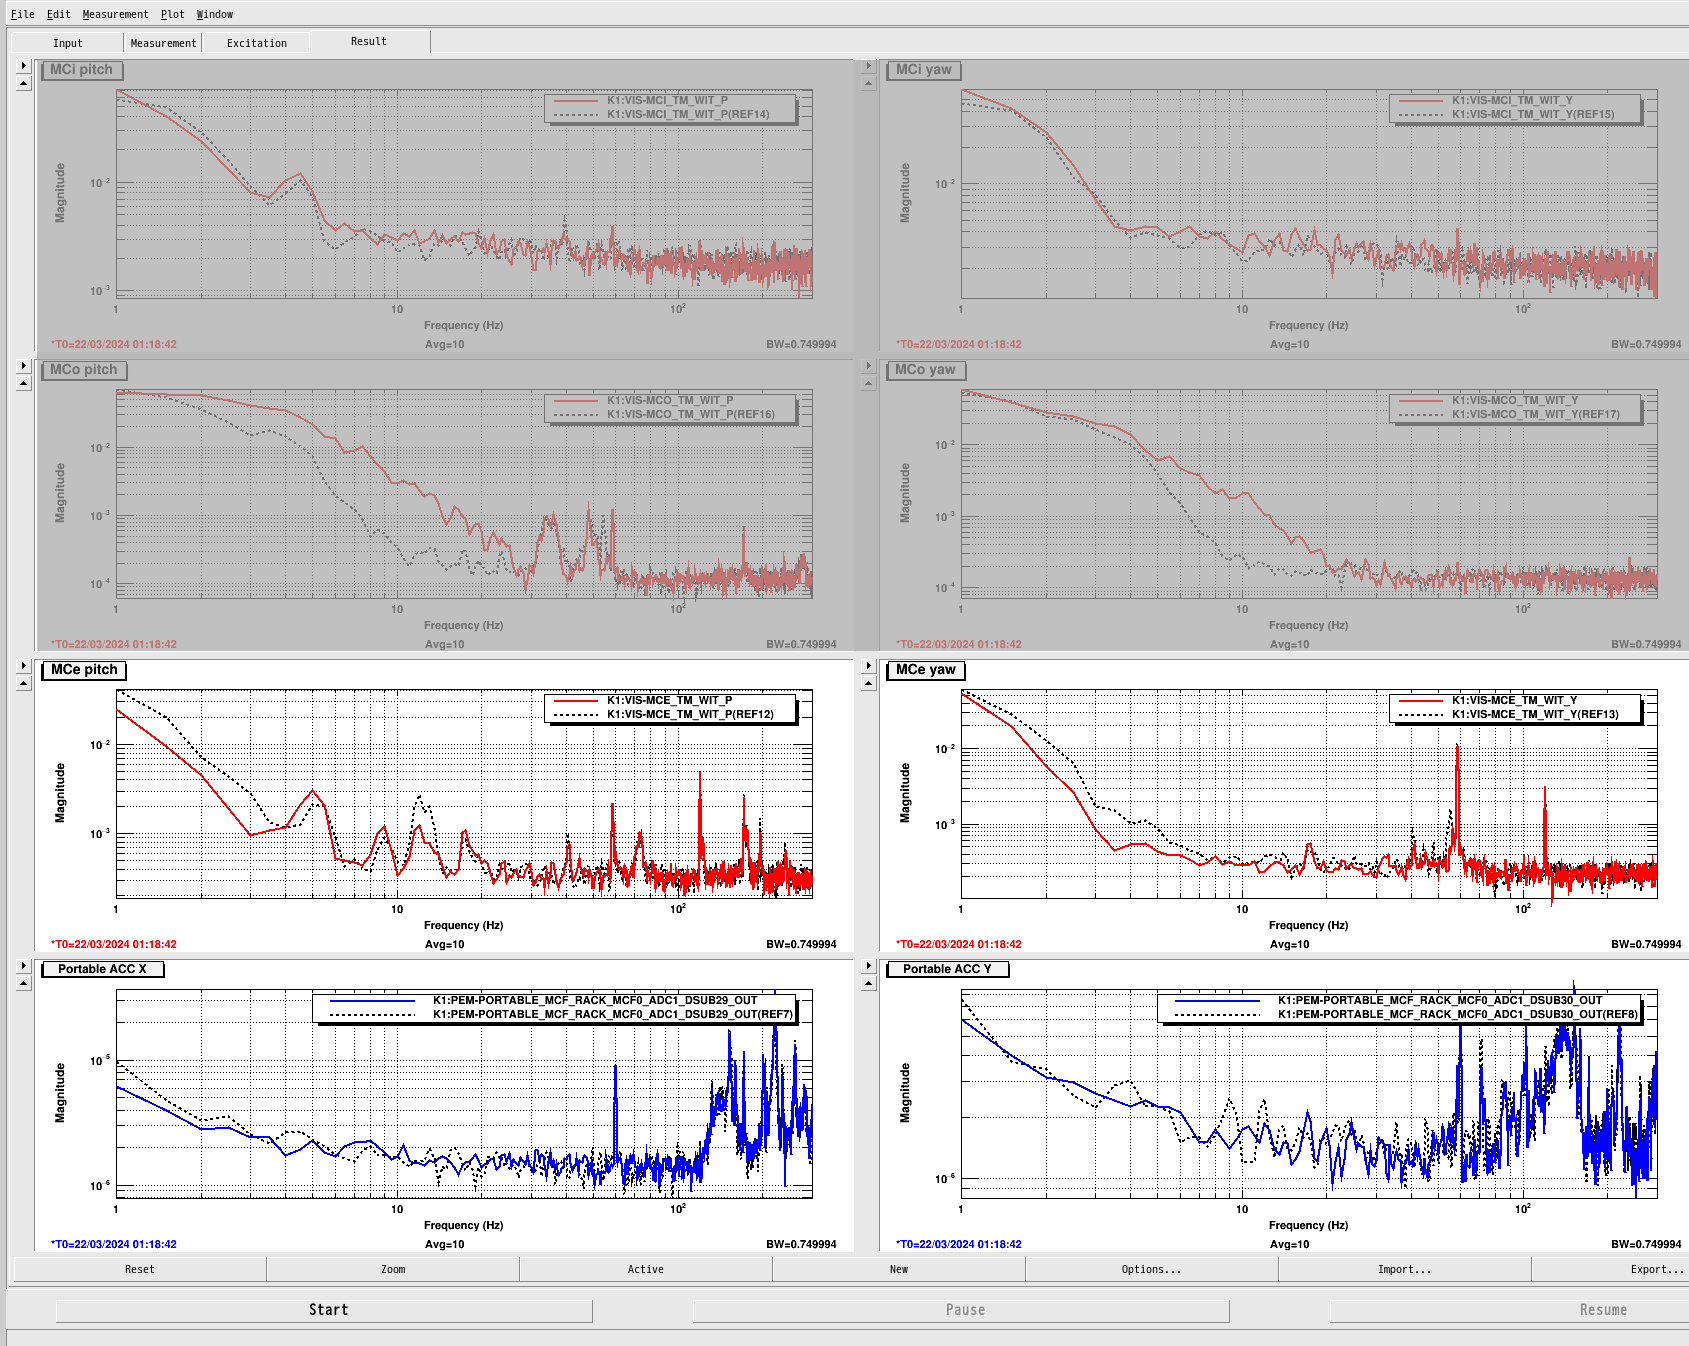

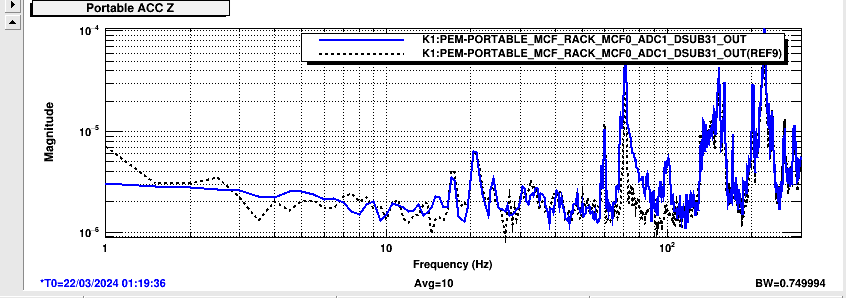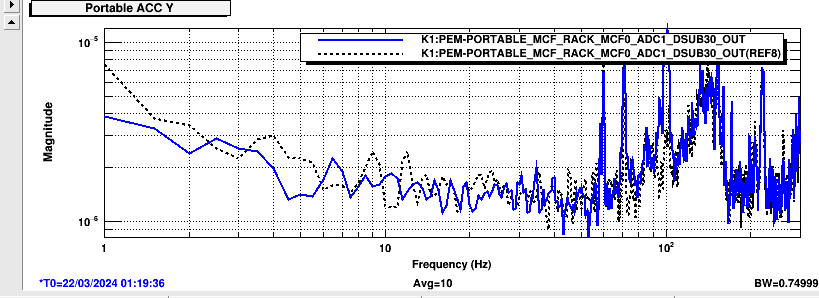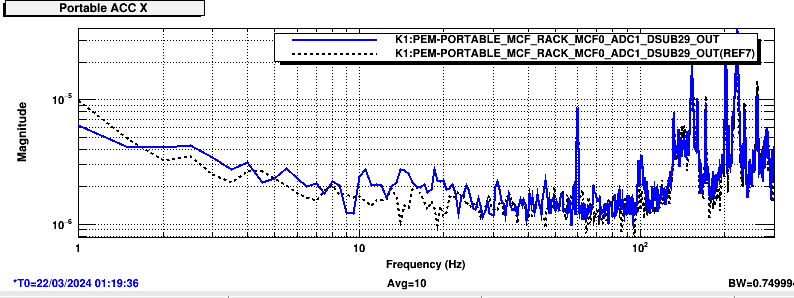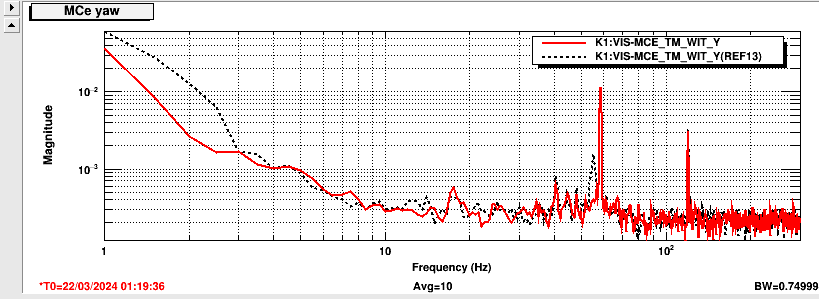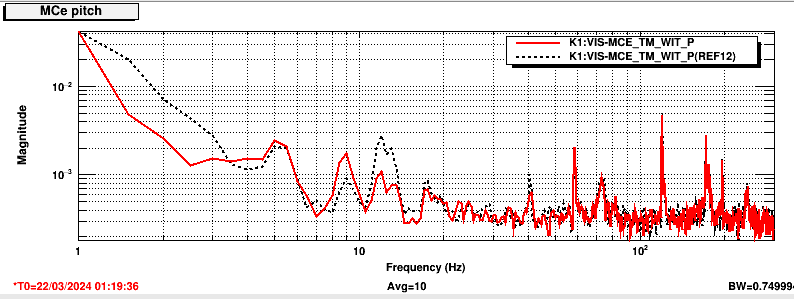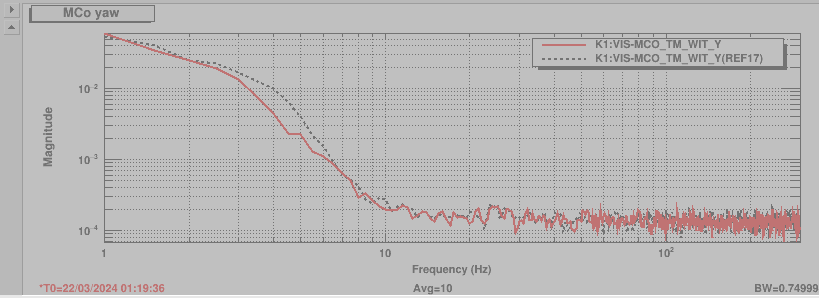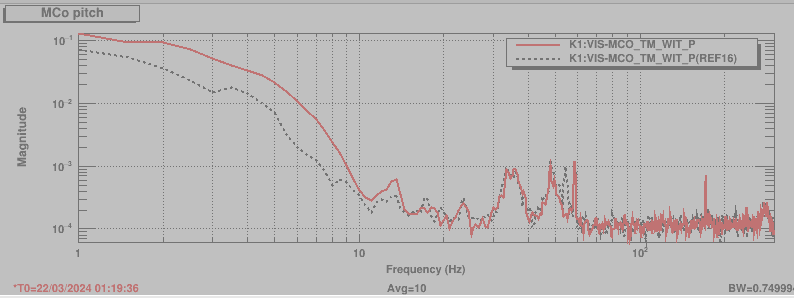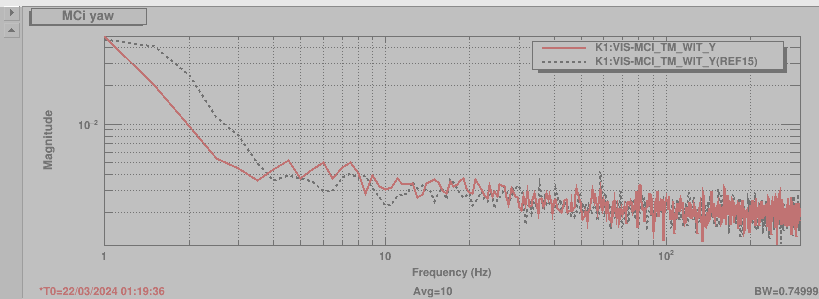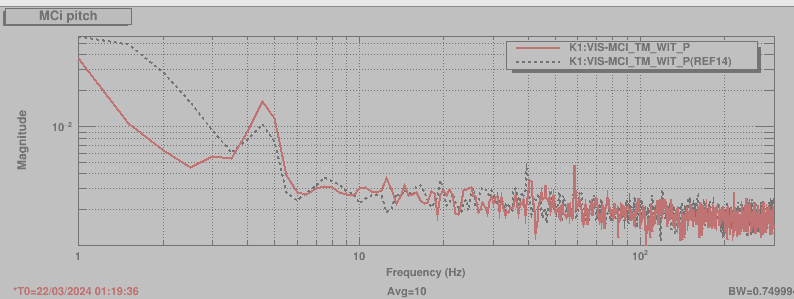

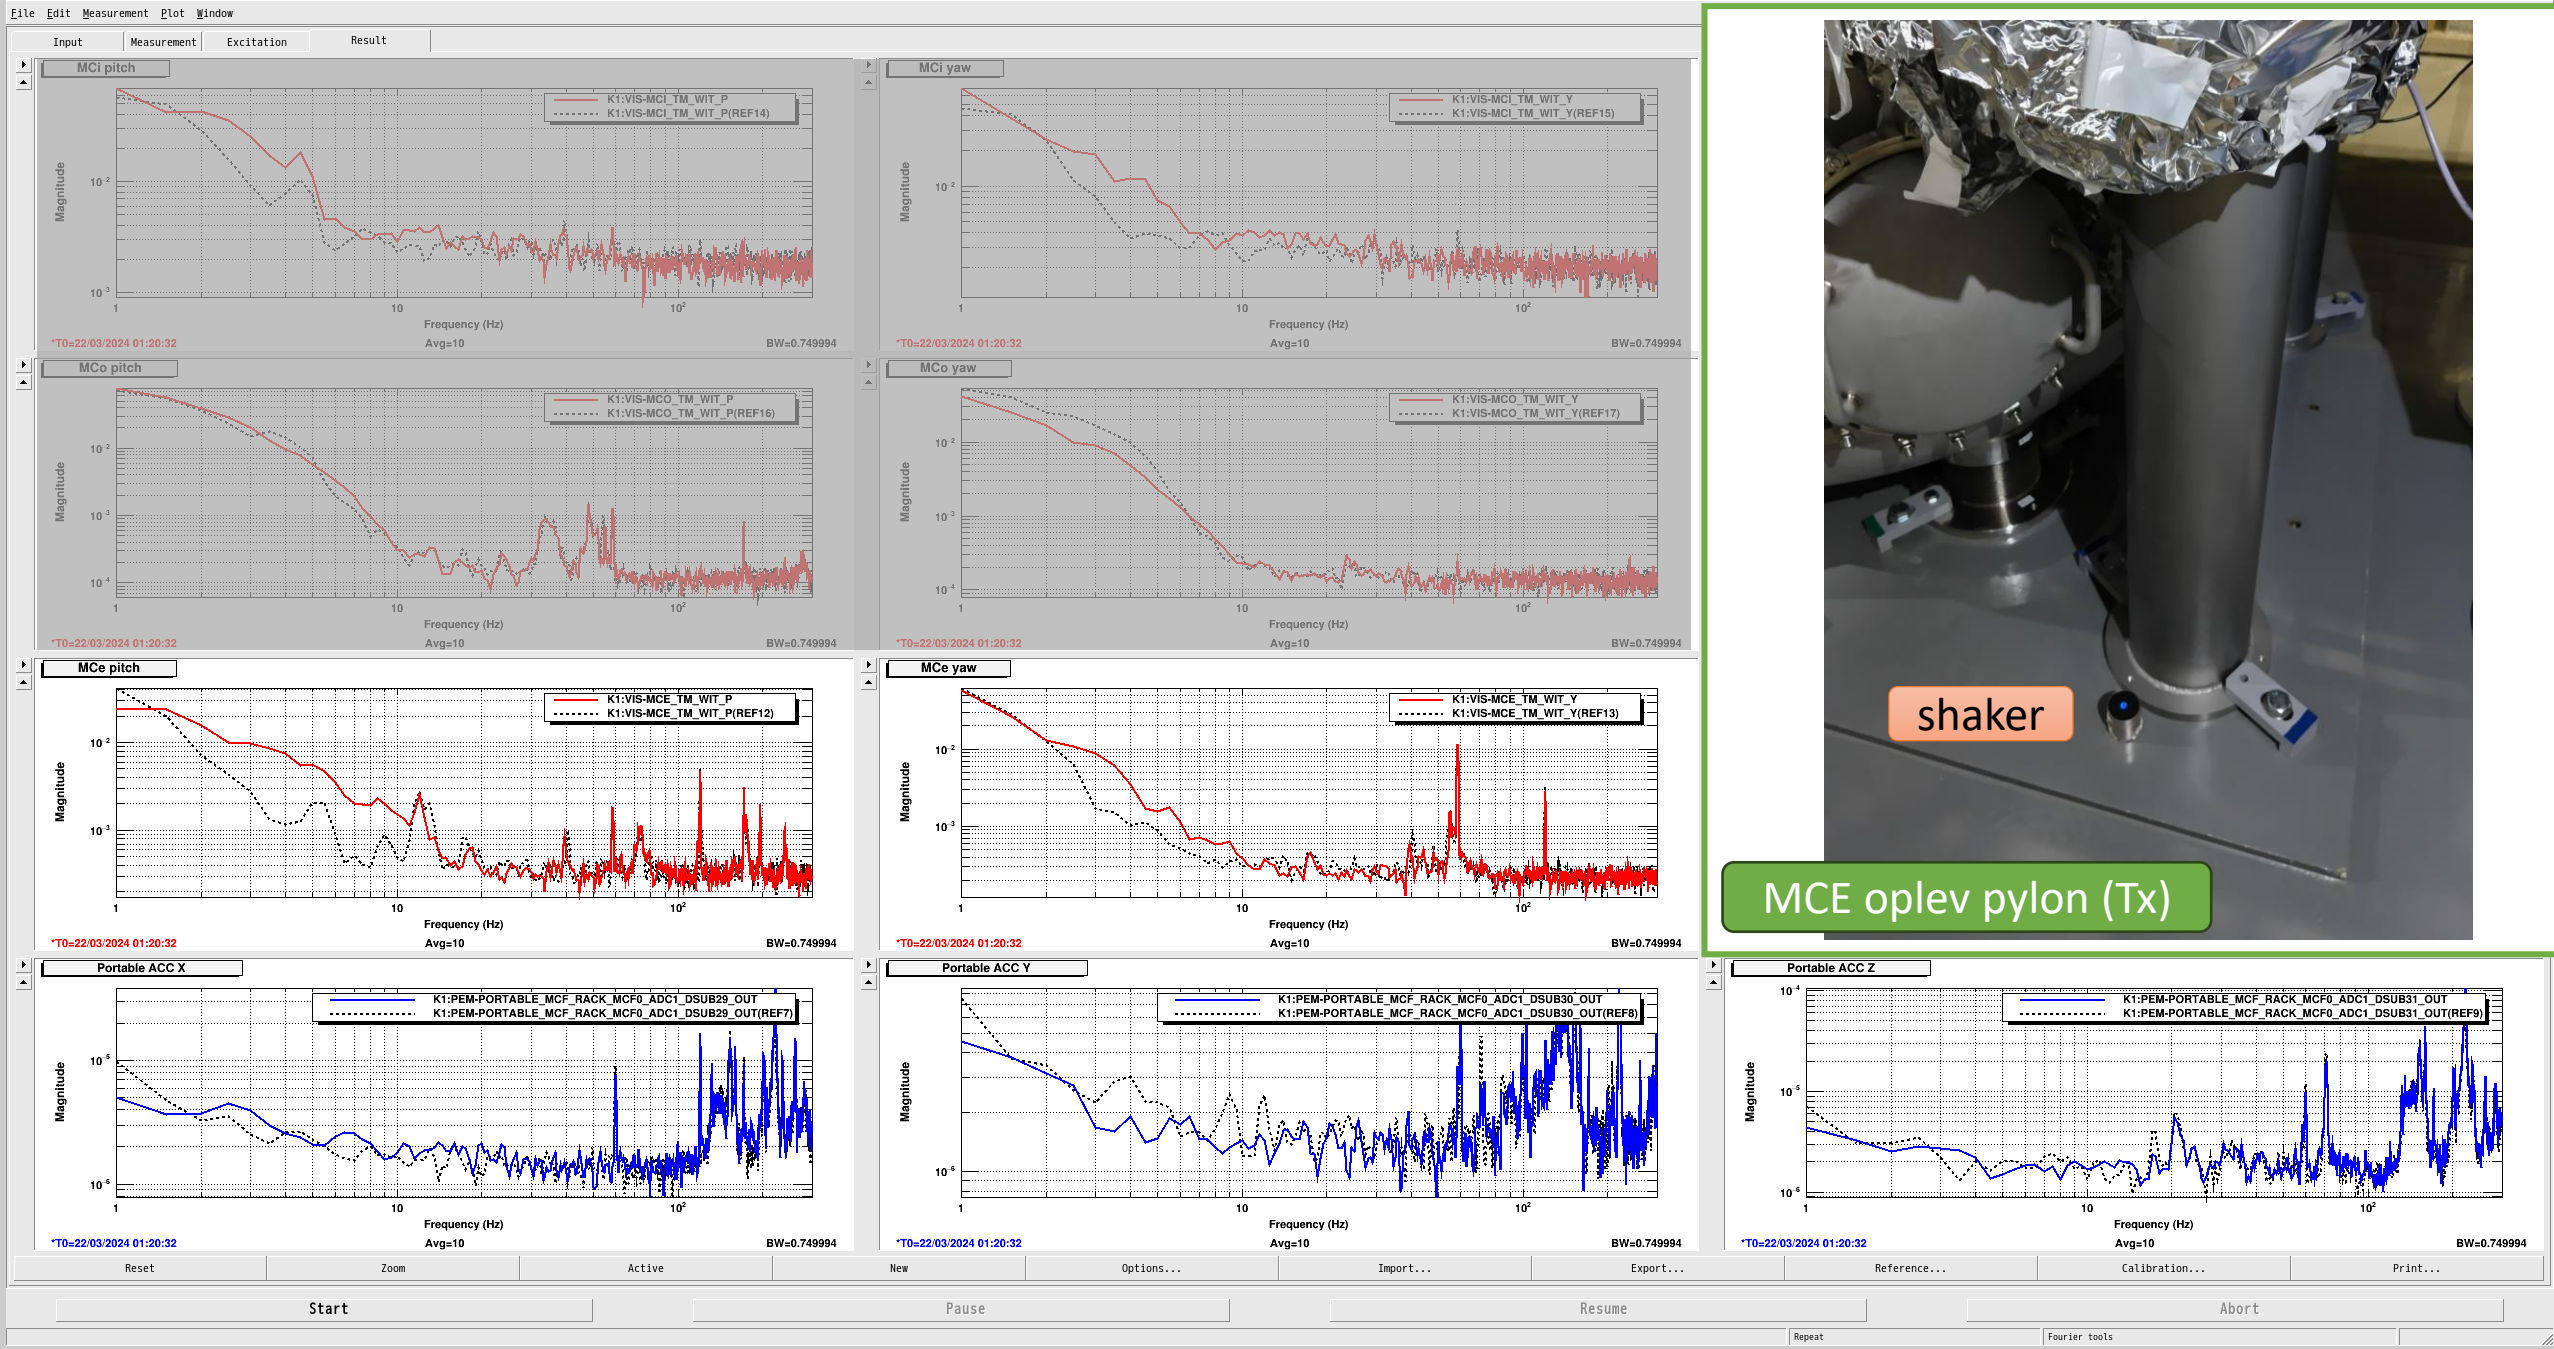

MCE oplev pylon (Tx)

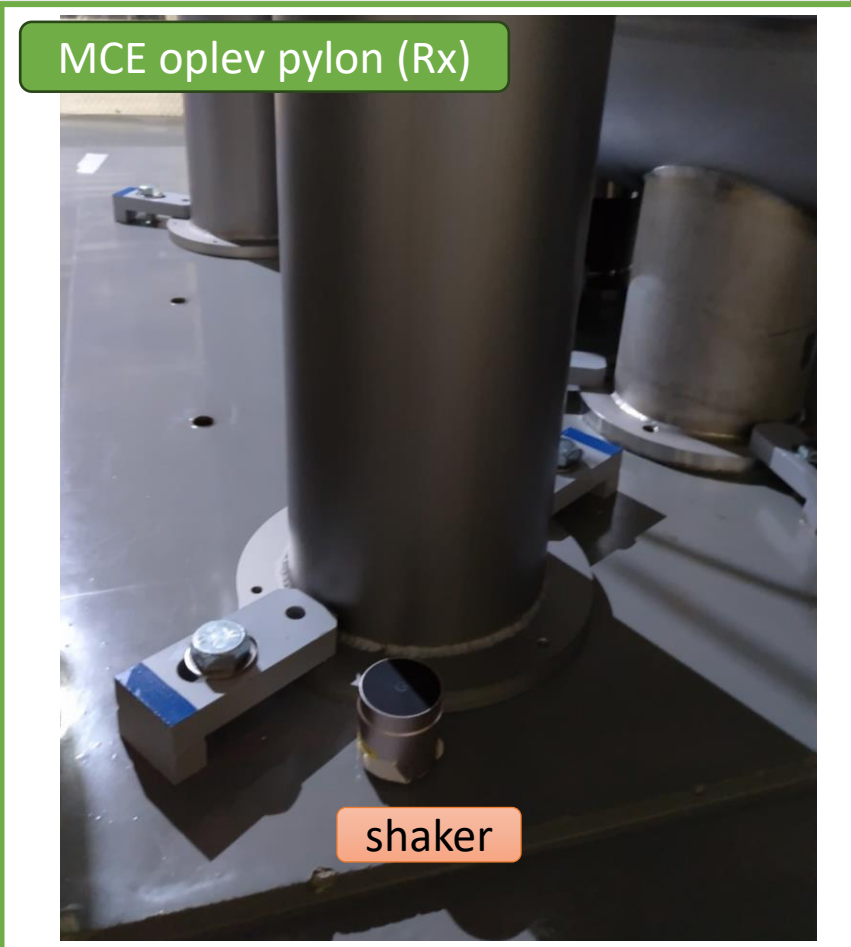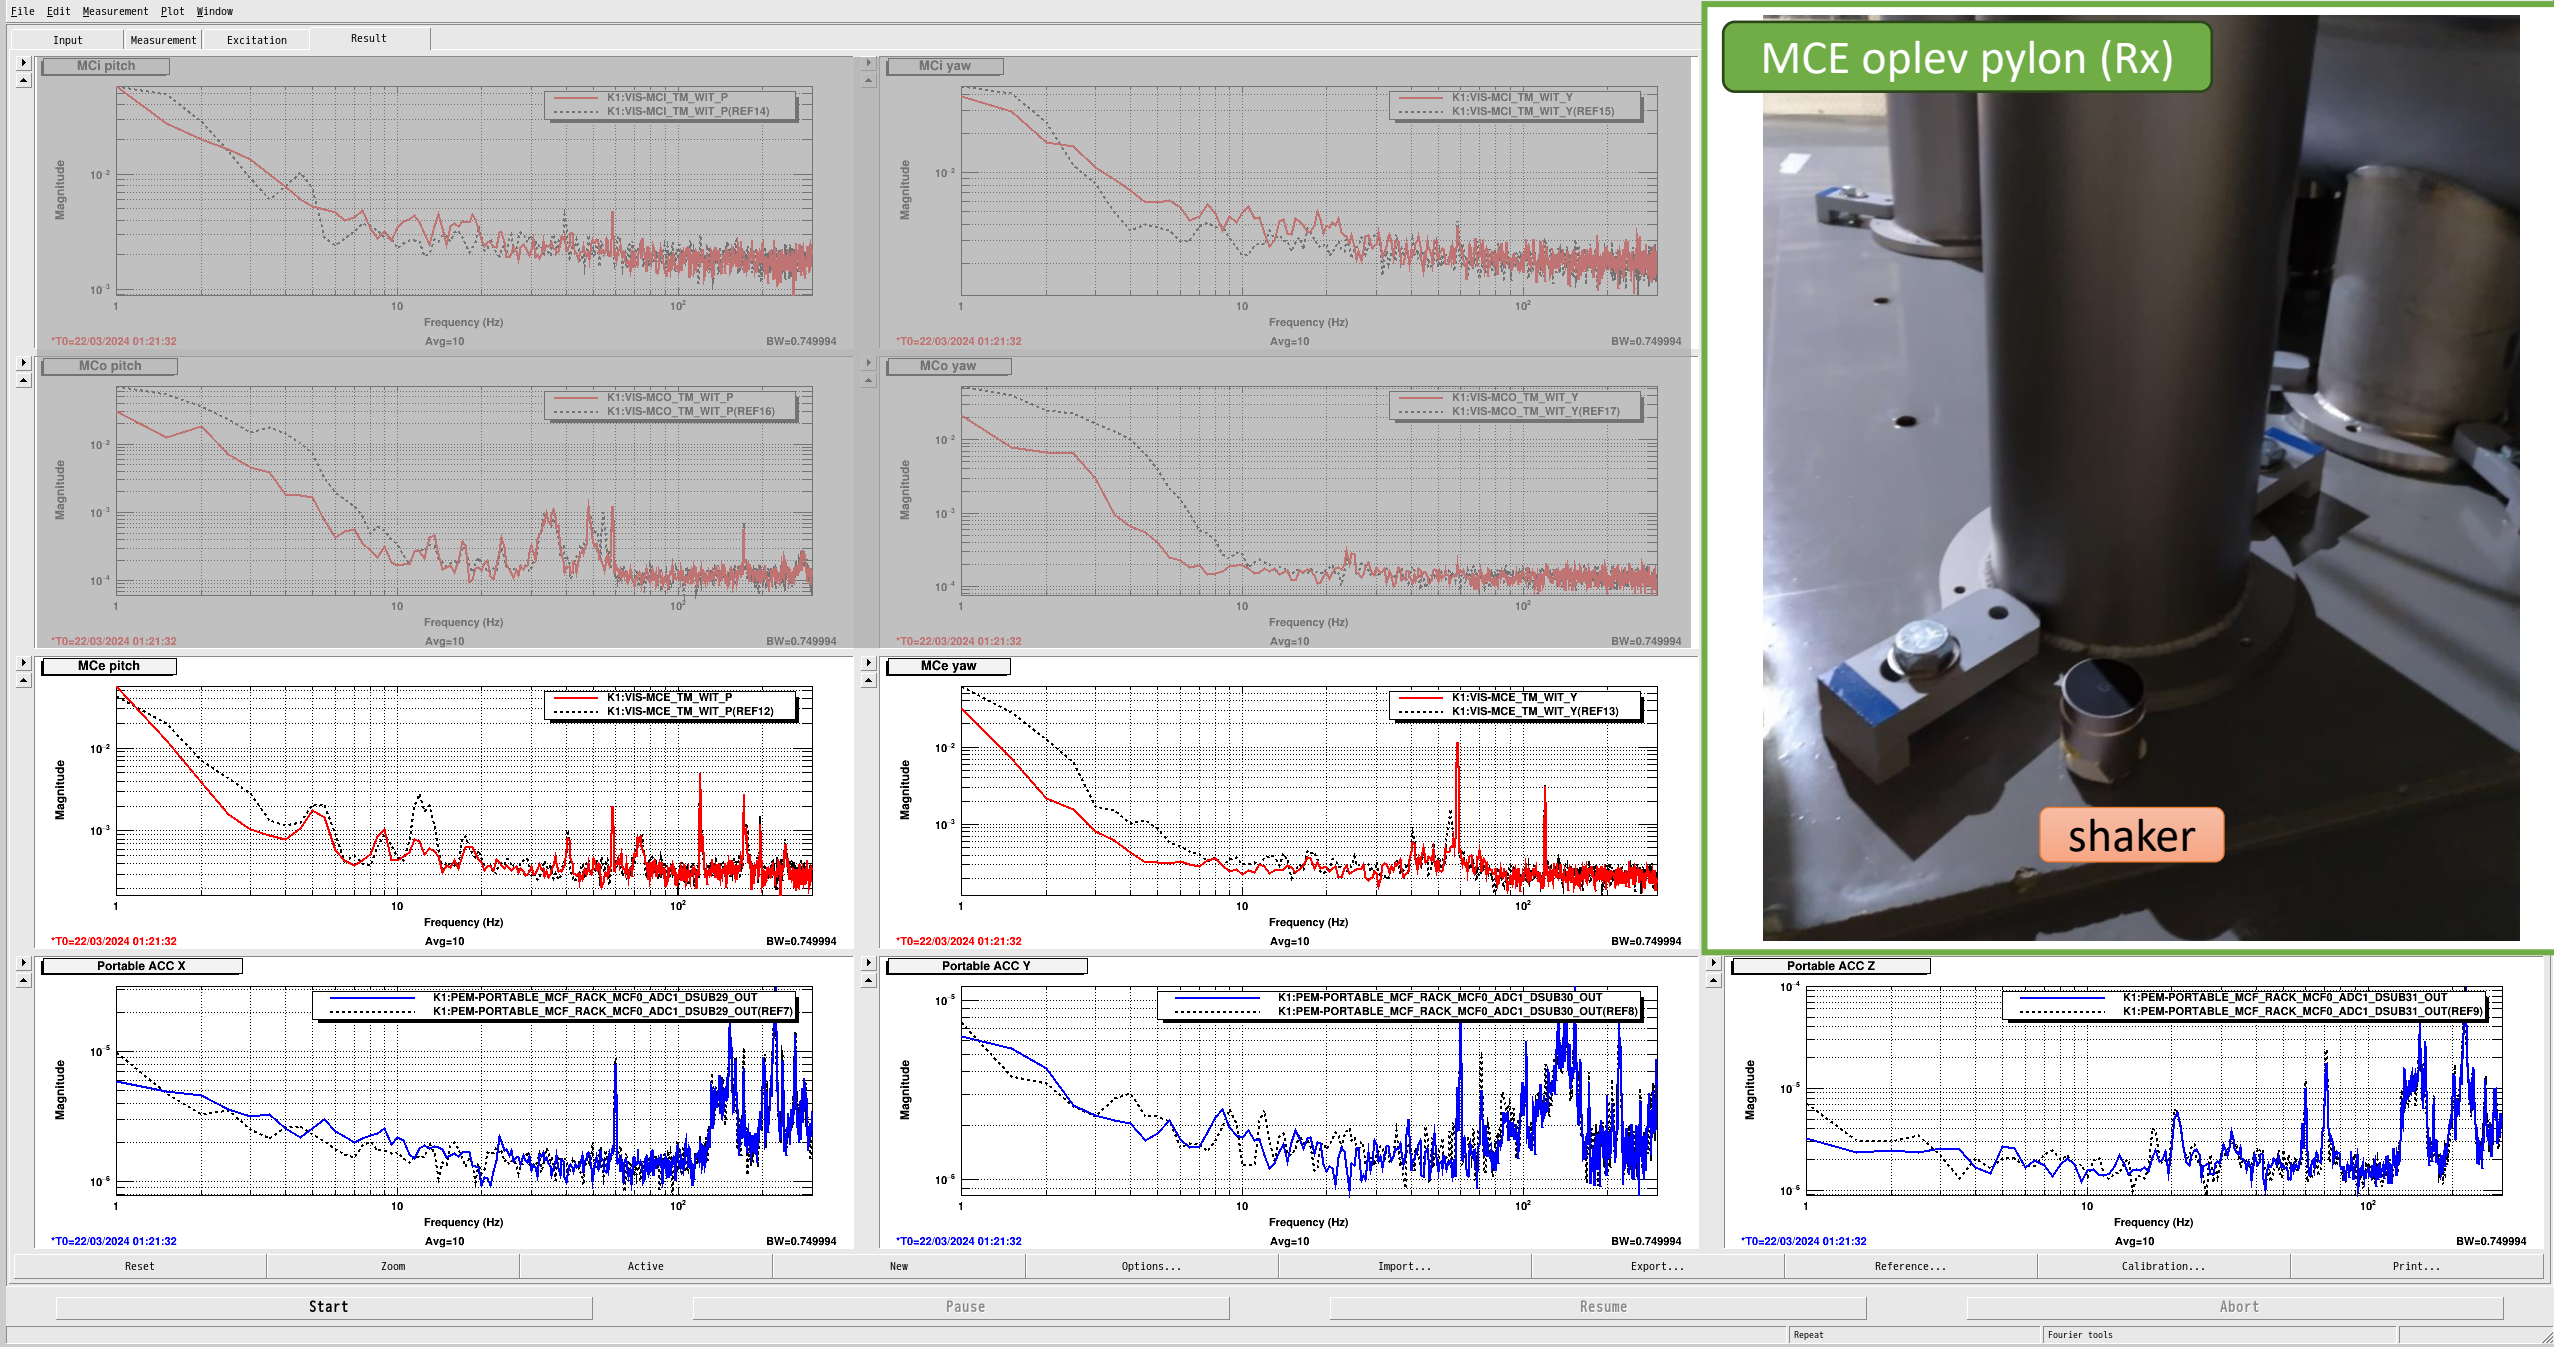

MCE oplev pylon (Rx)

shaker

Start


Pause











Resume



Abort


Repeat

Fourier tools

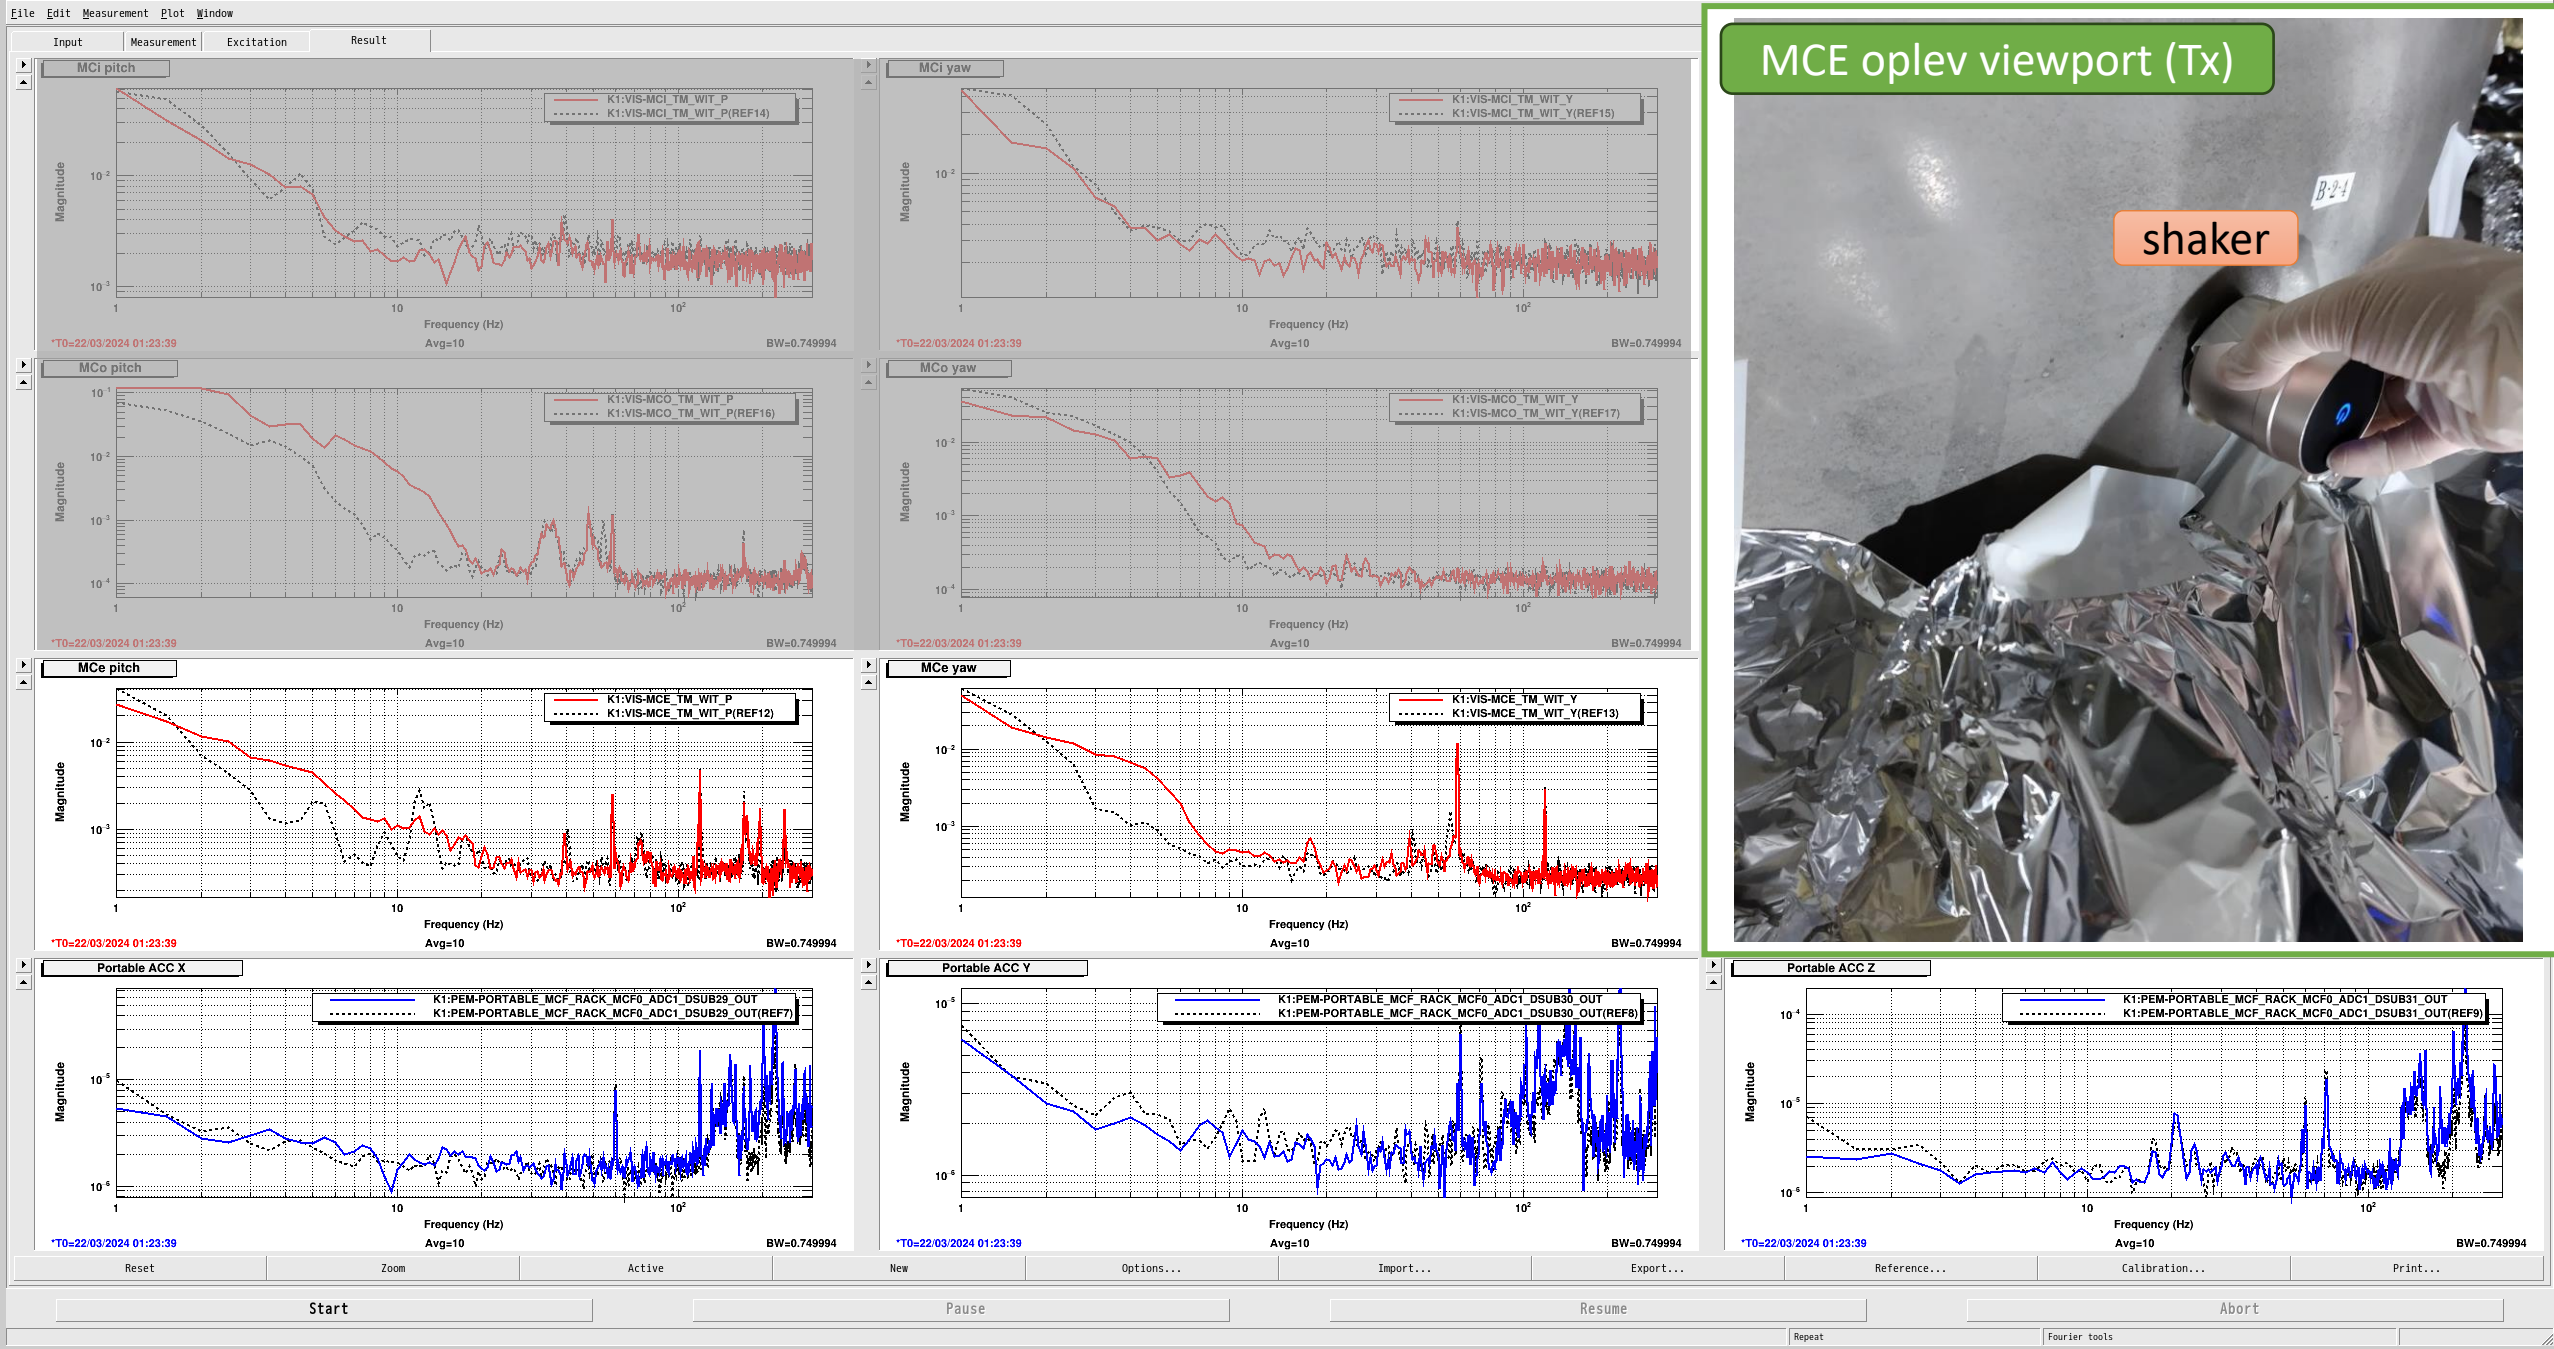

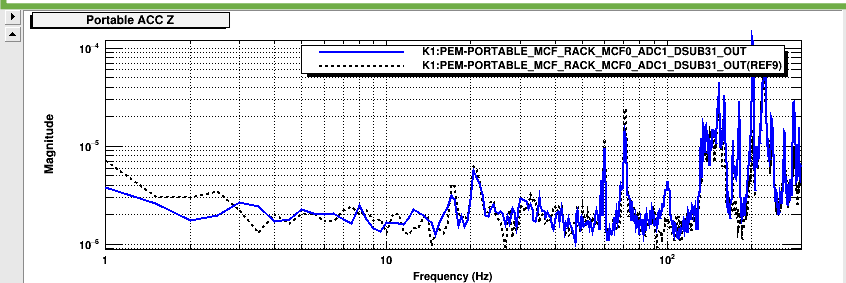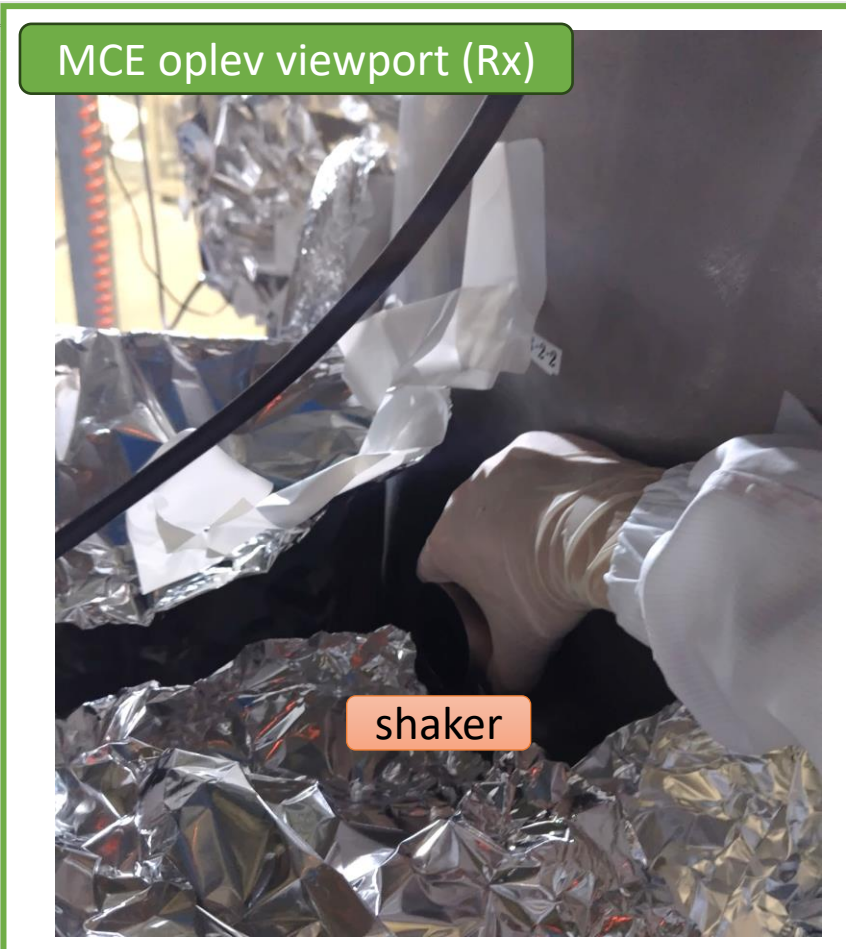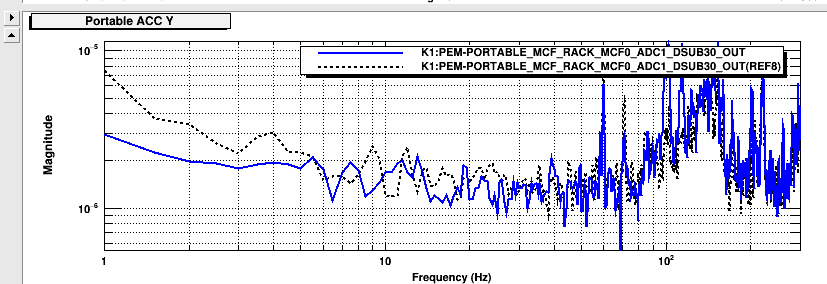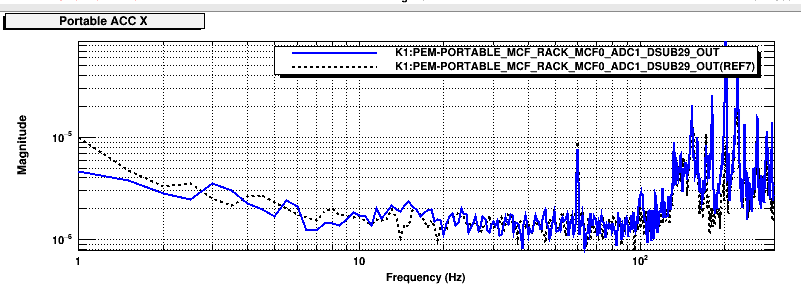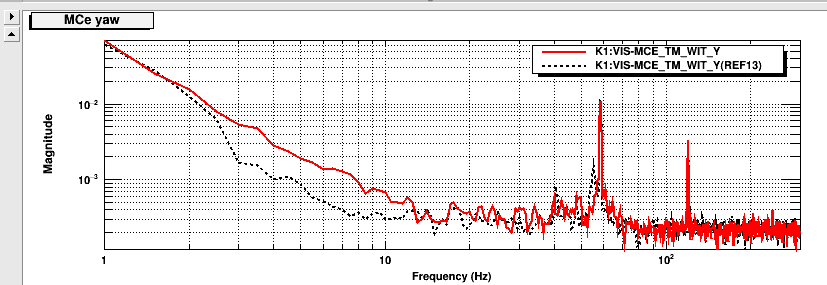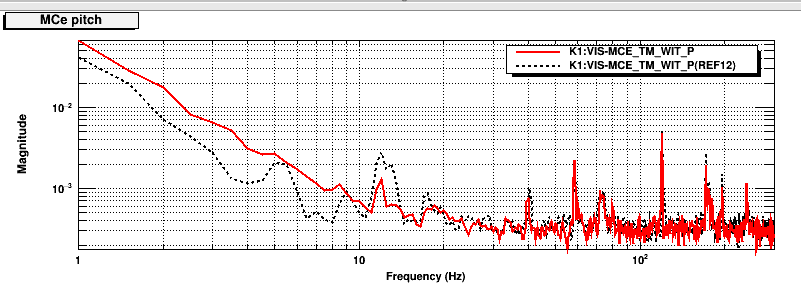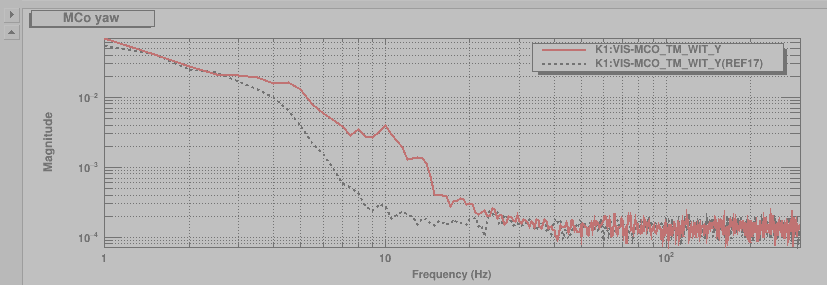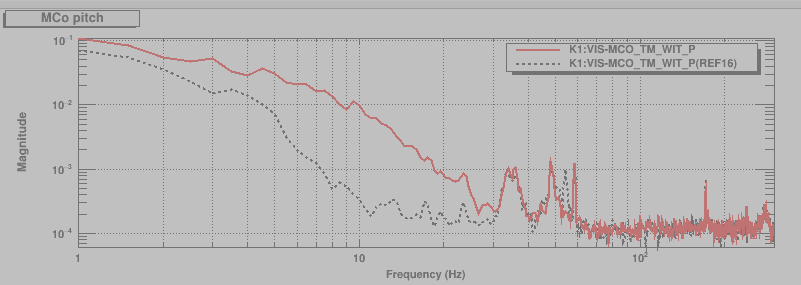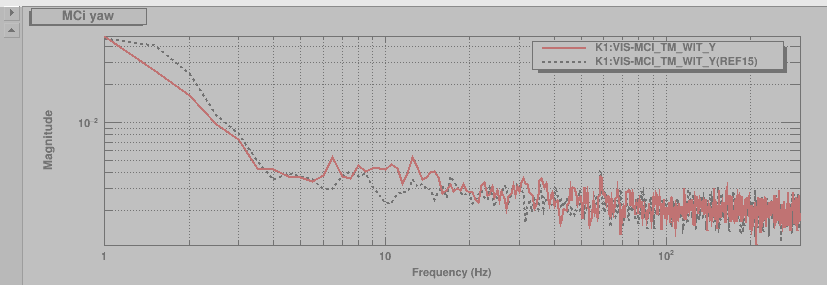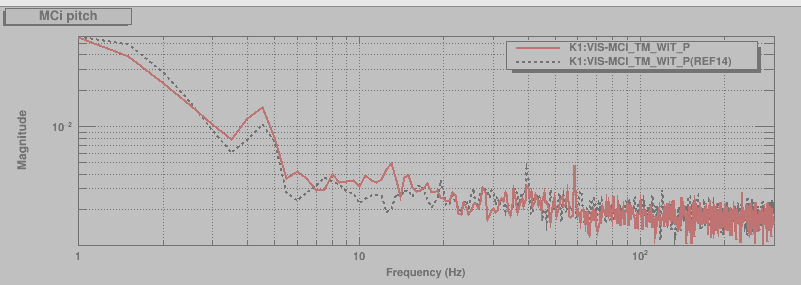

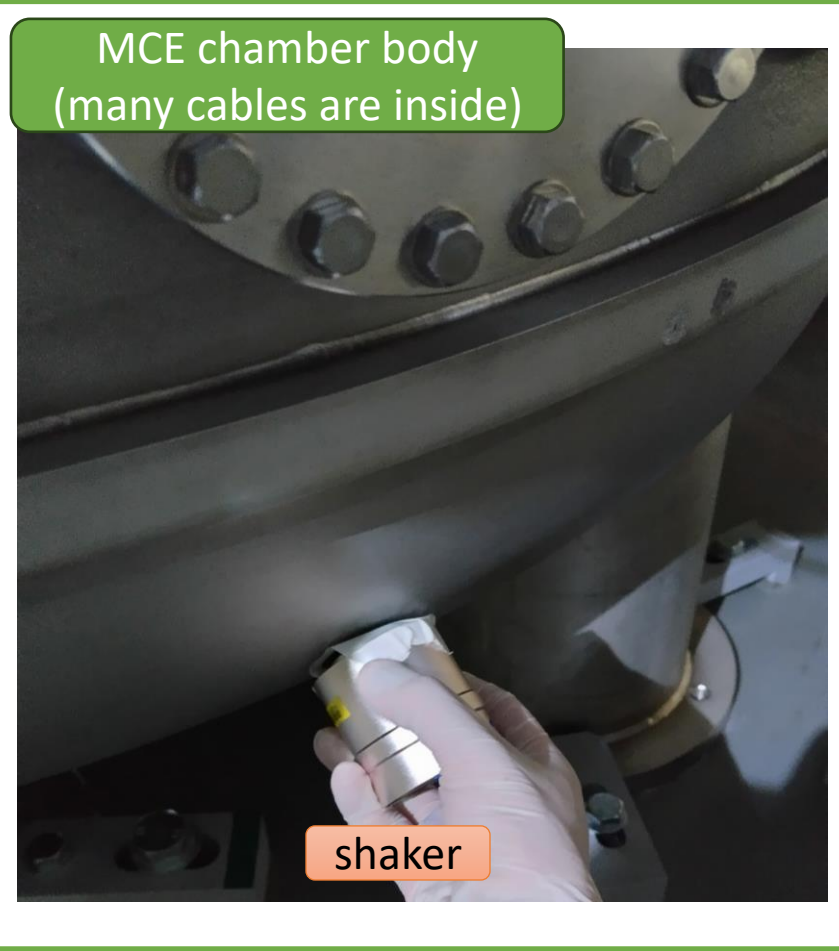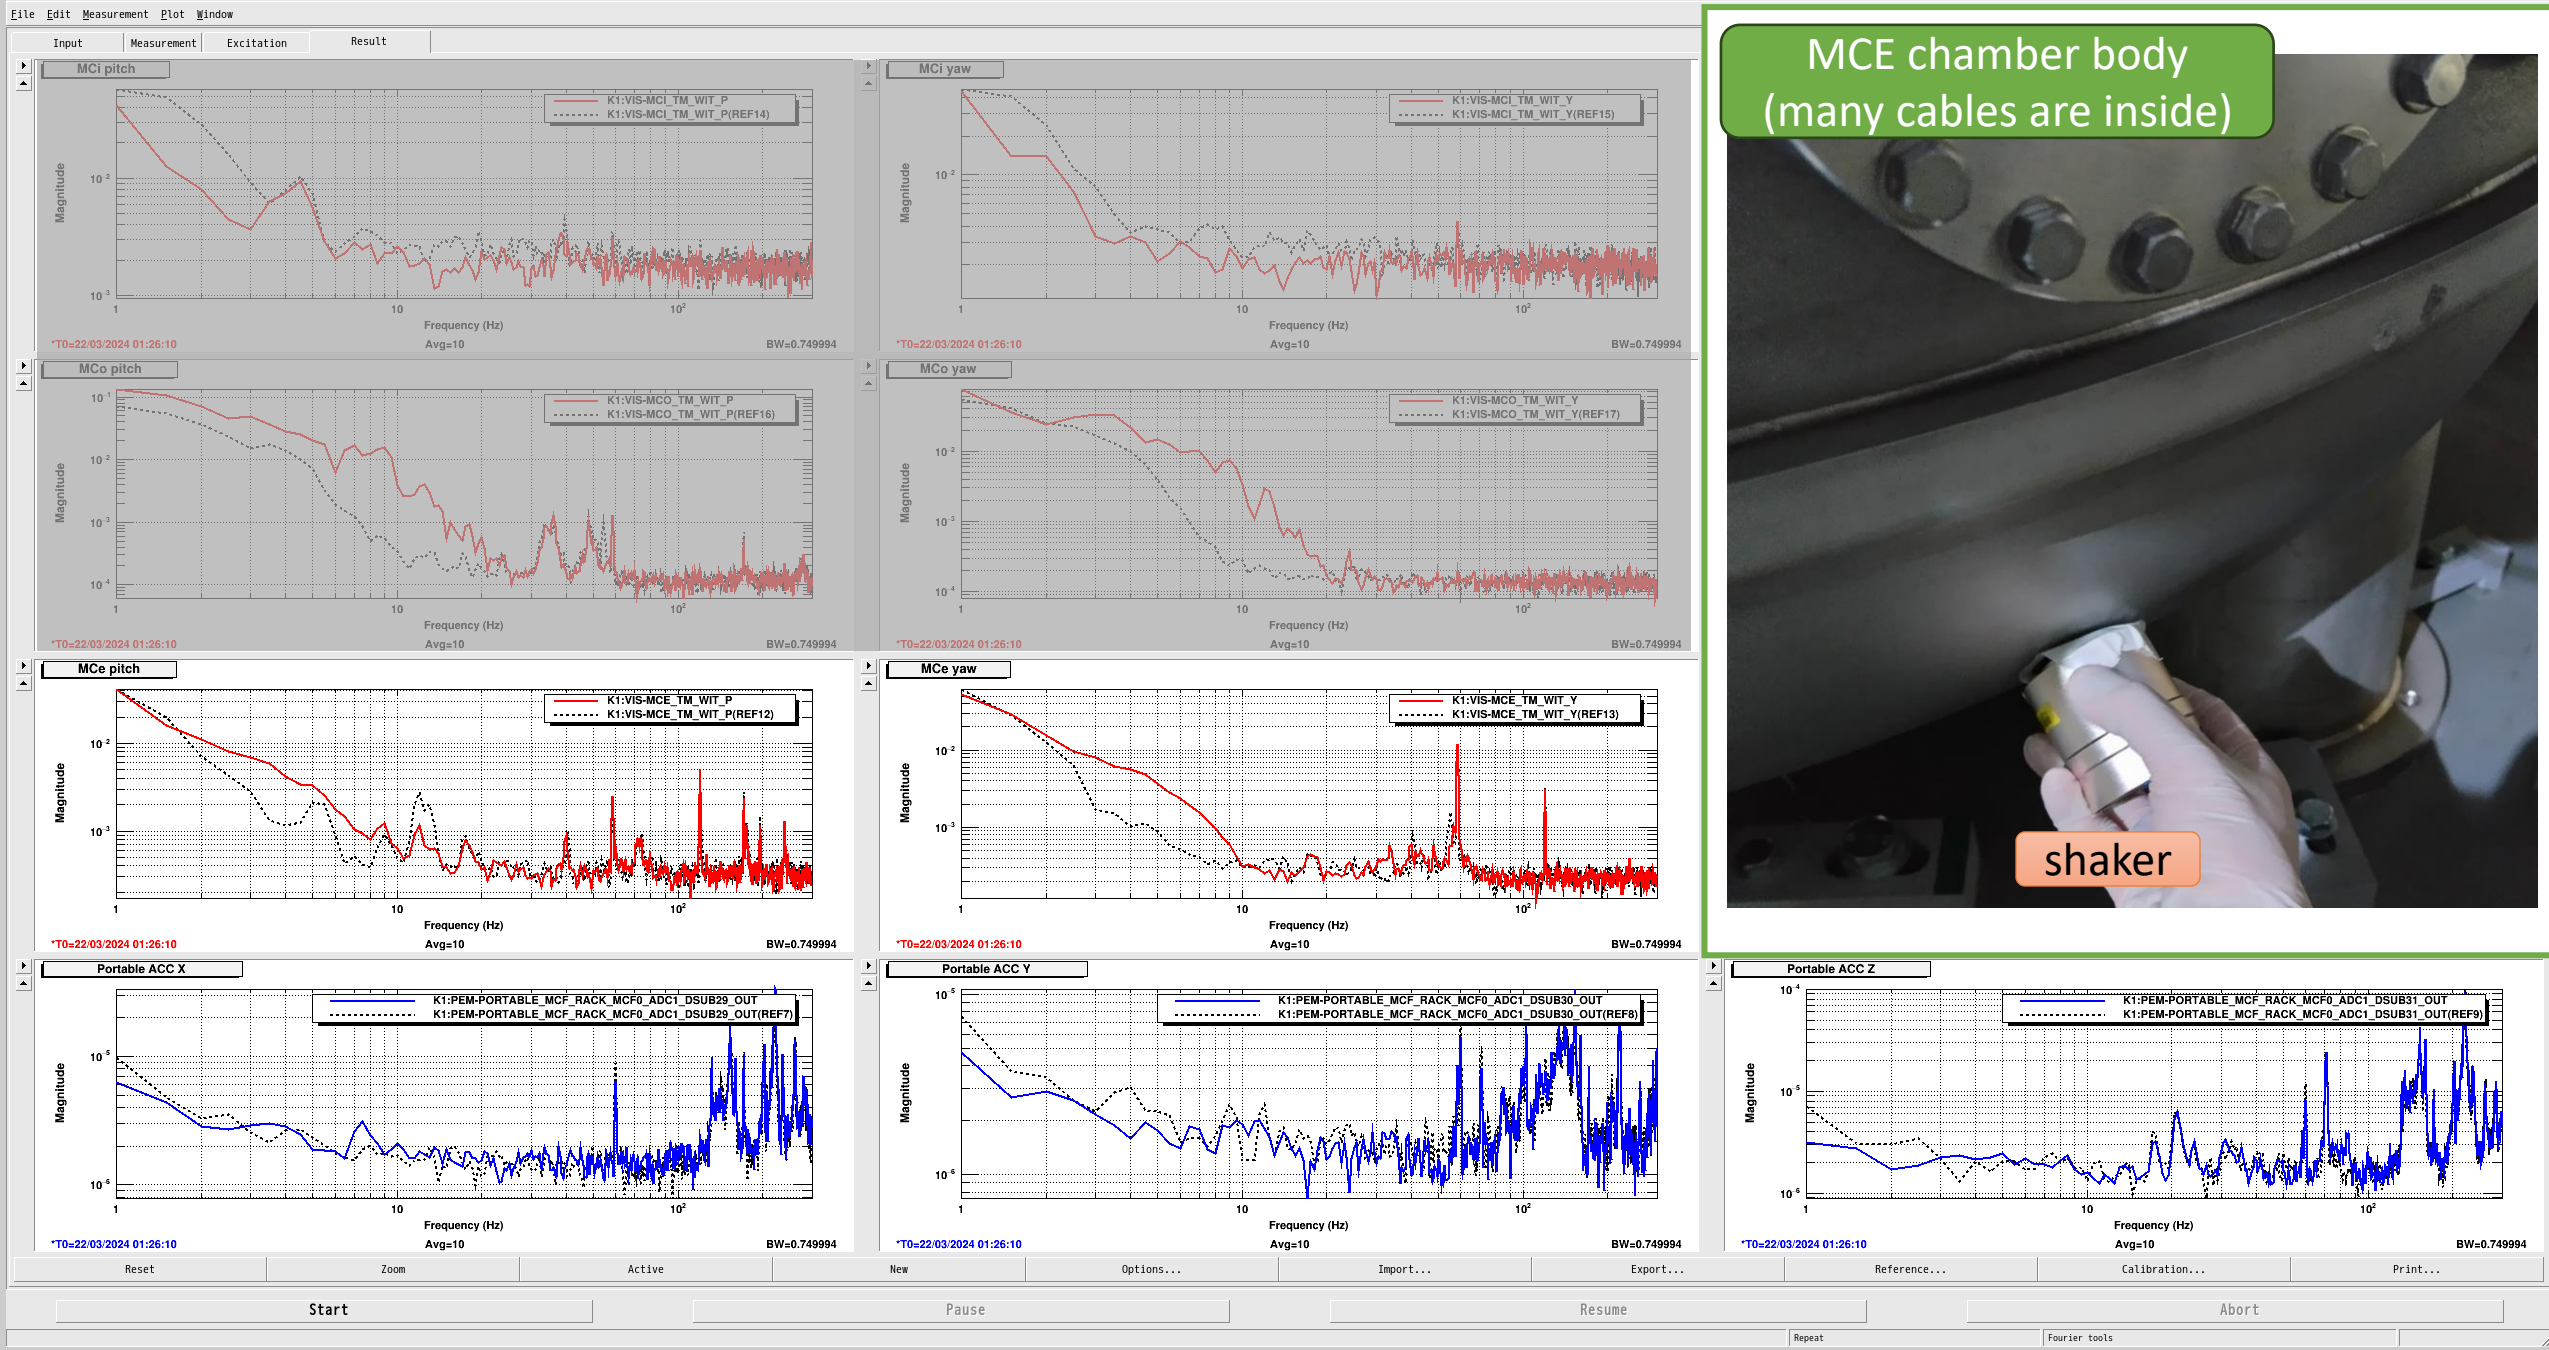


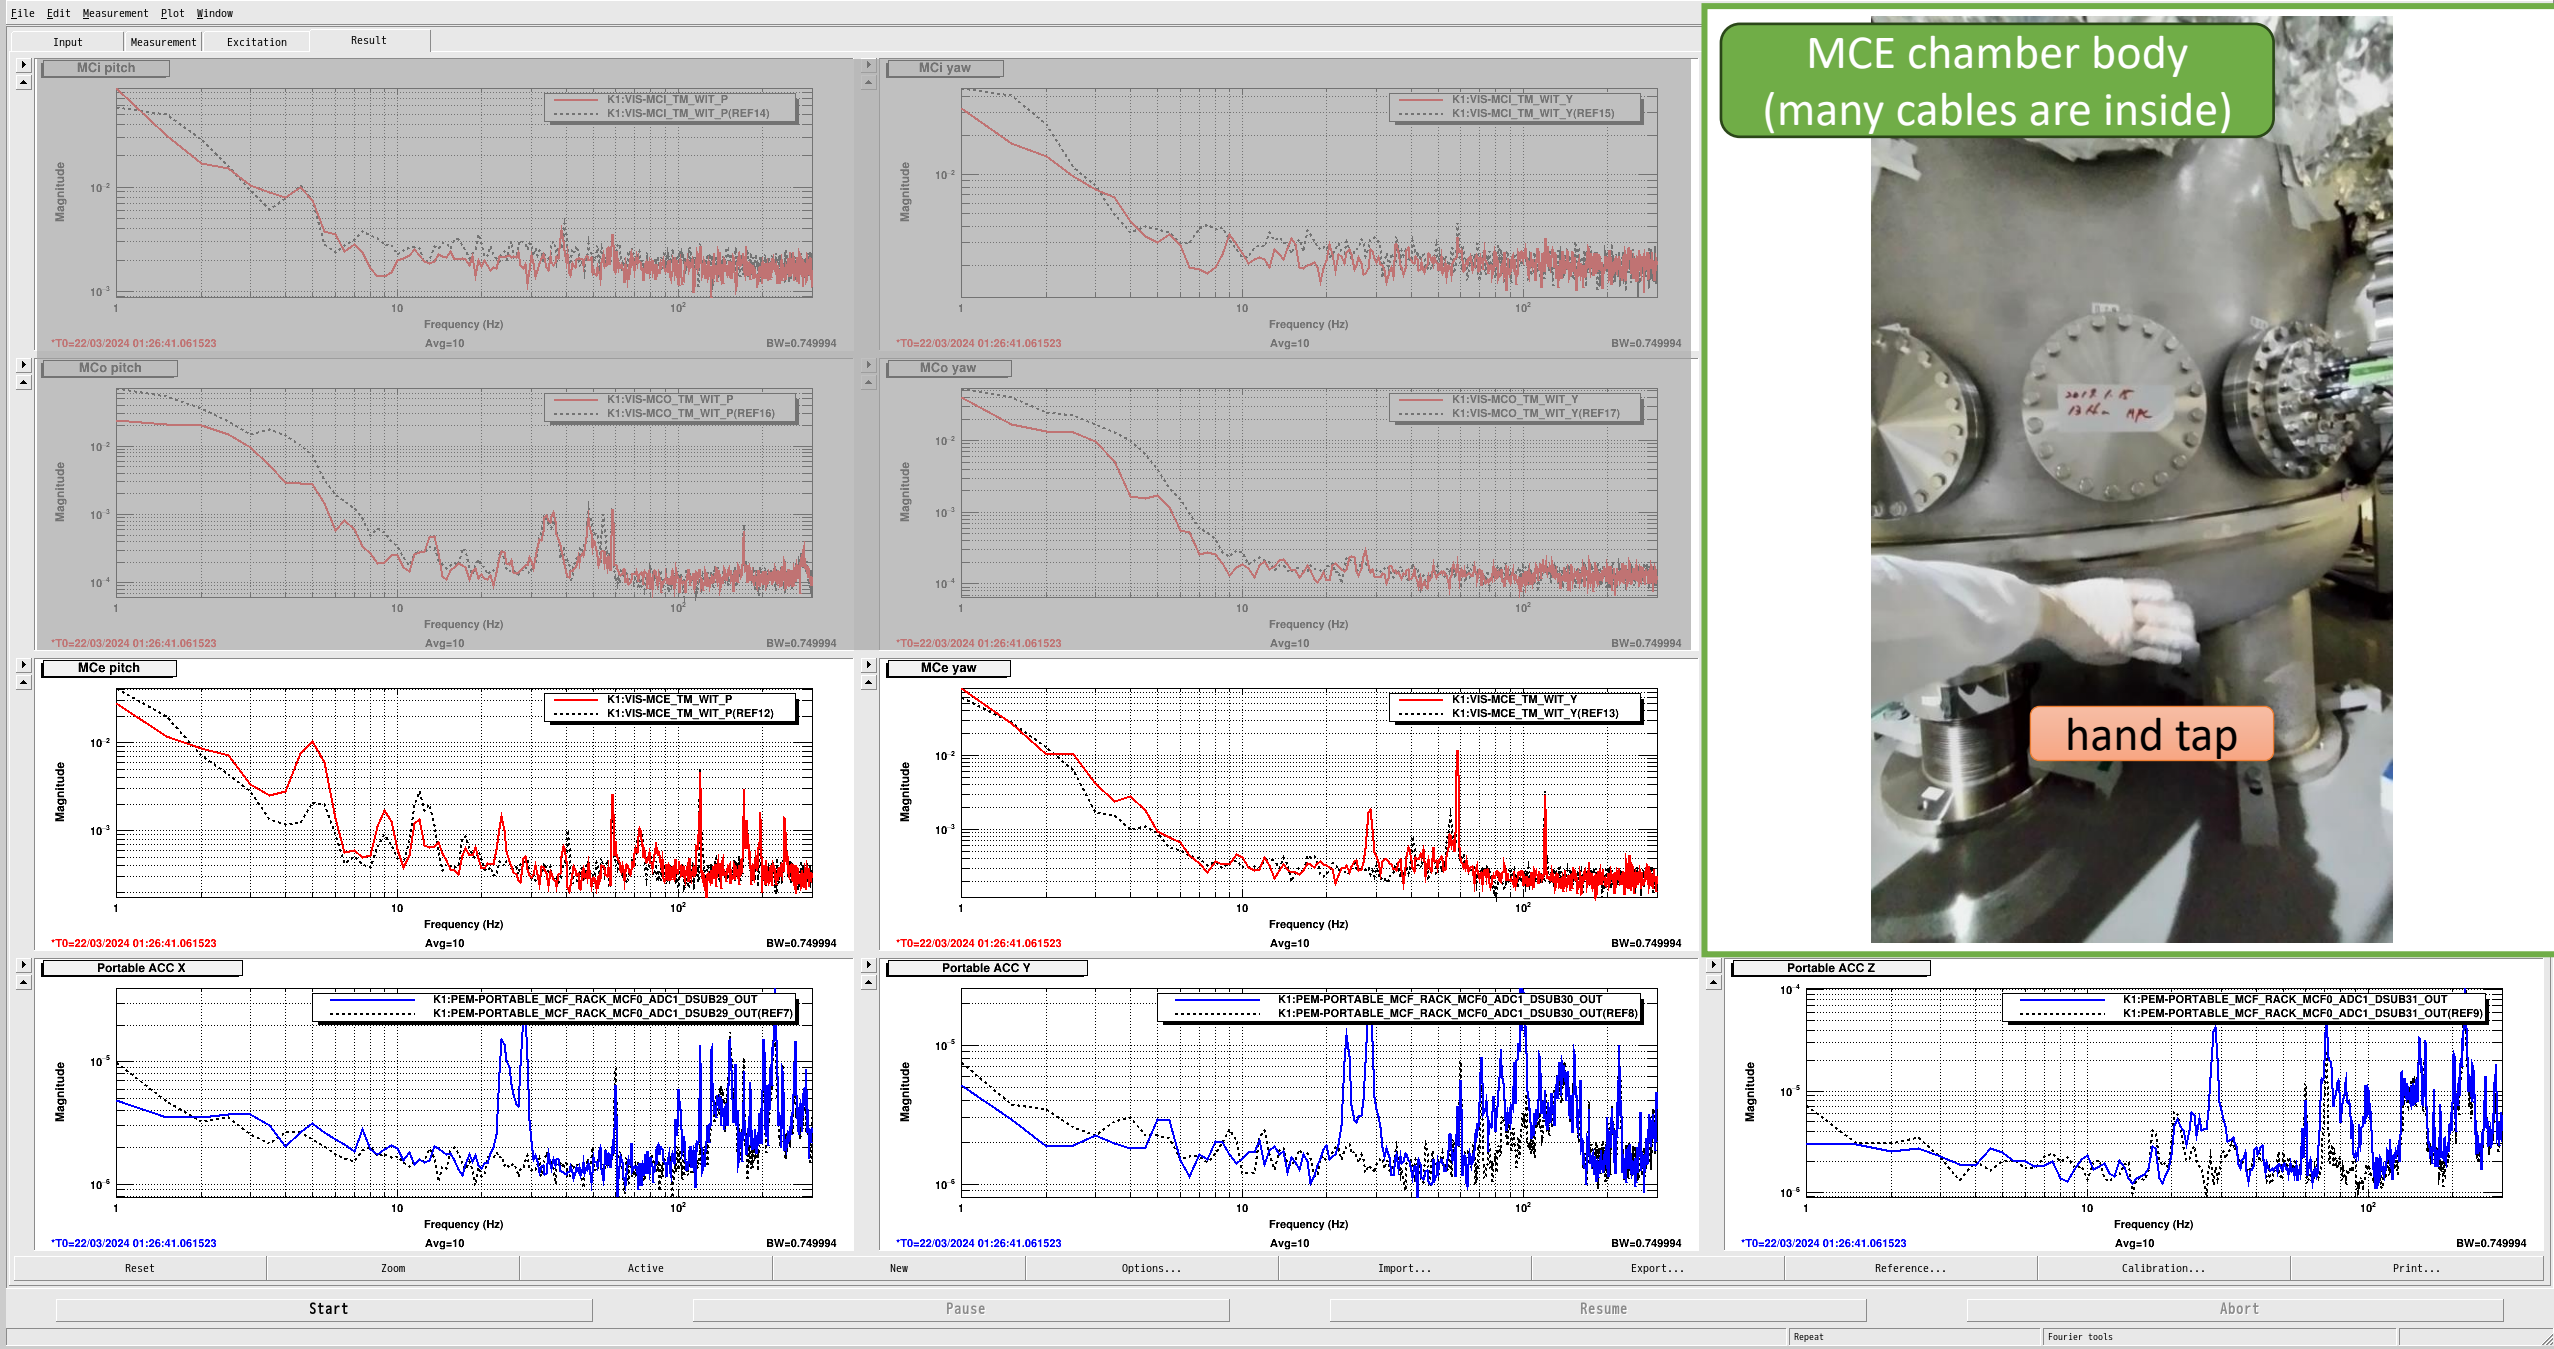

MCE chamber body
(many cables are inside)













hand tap

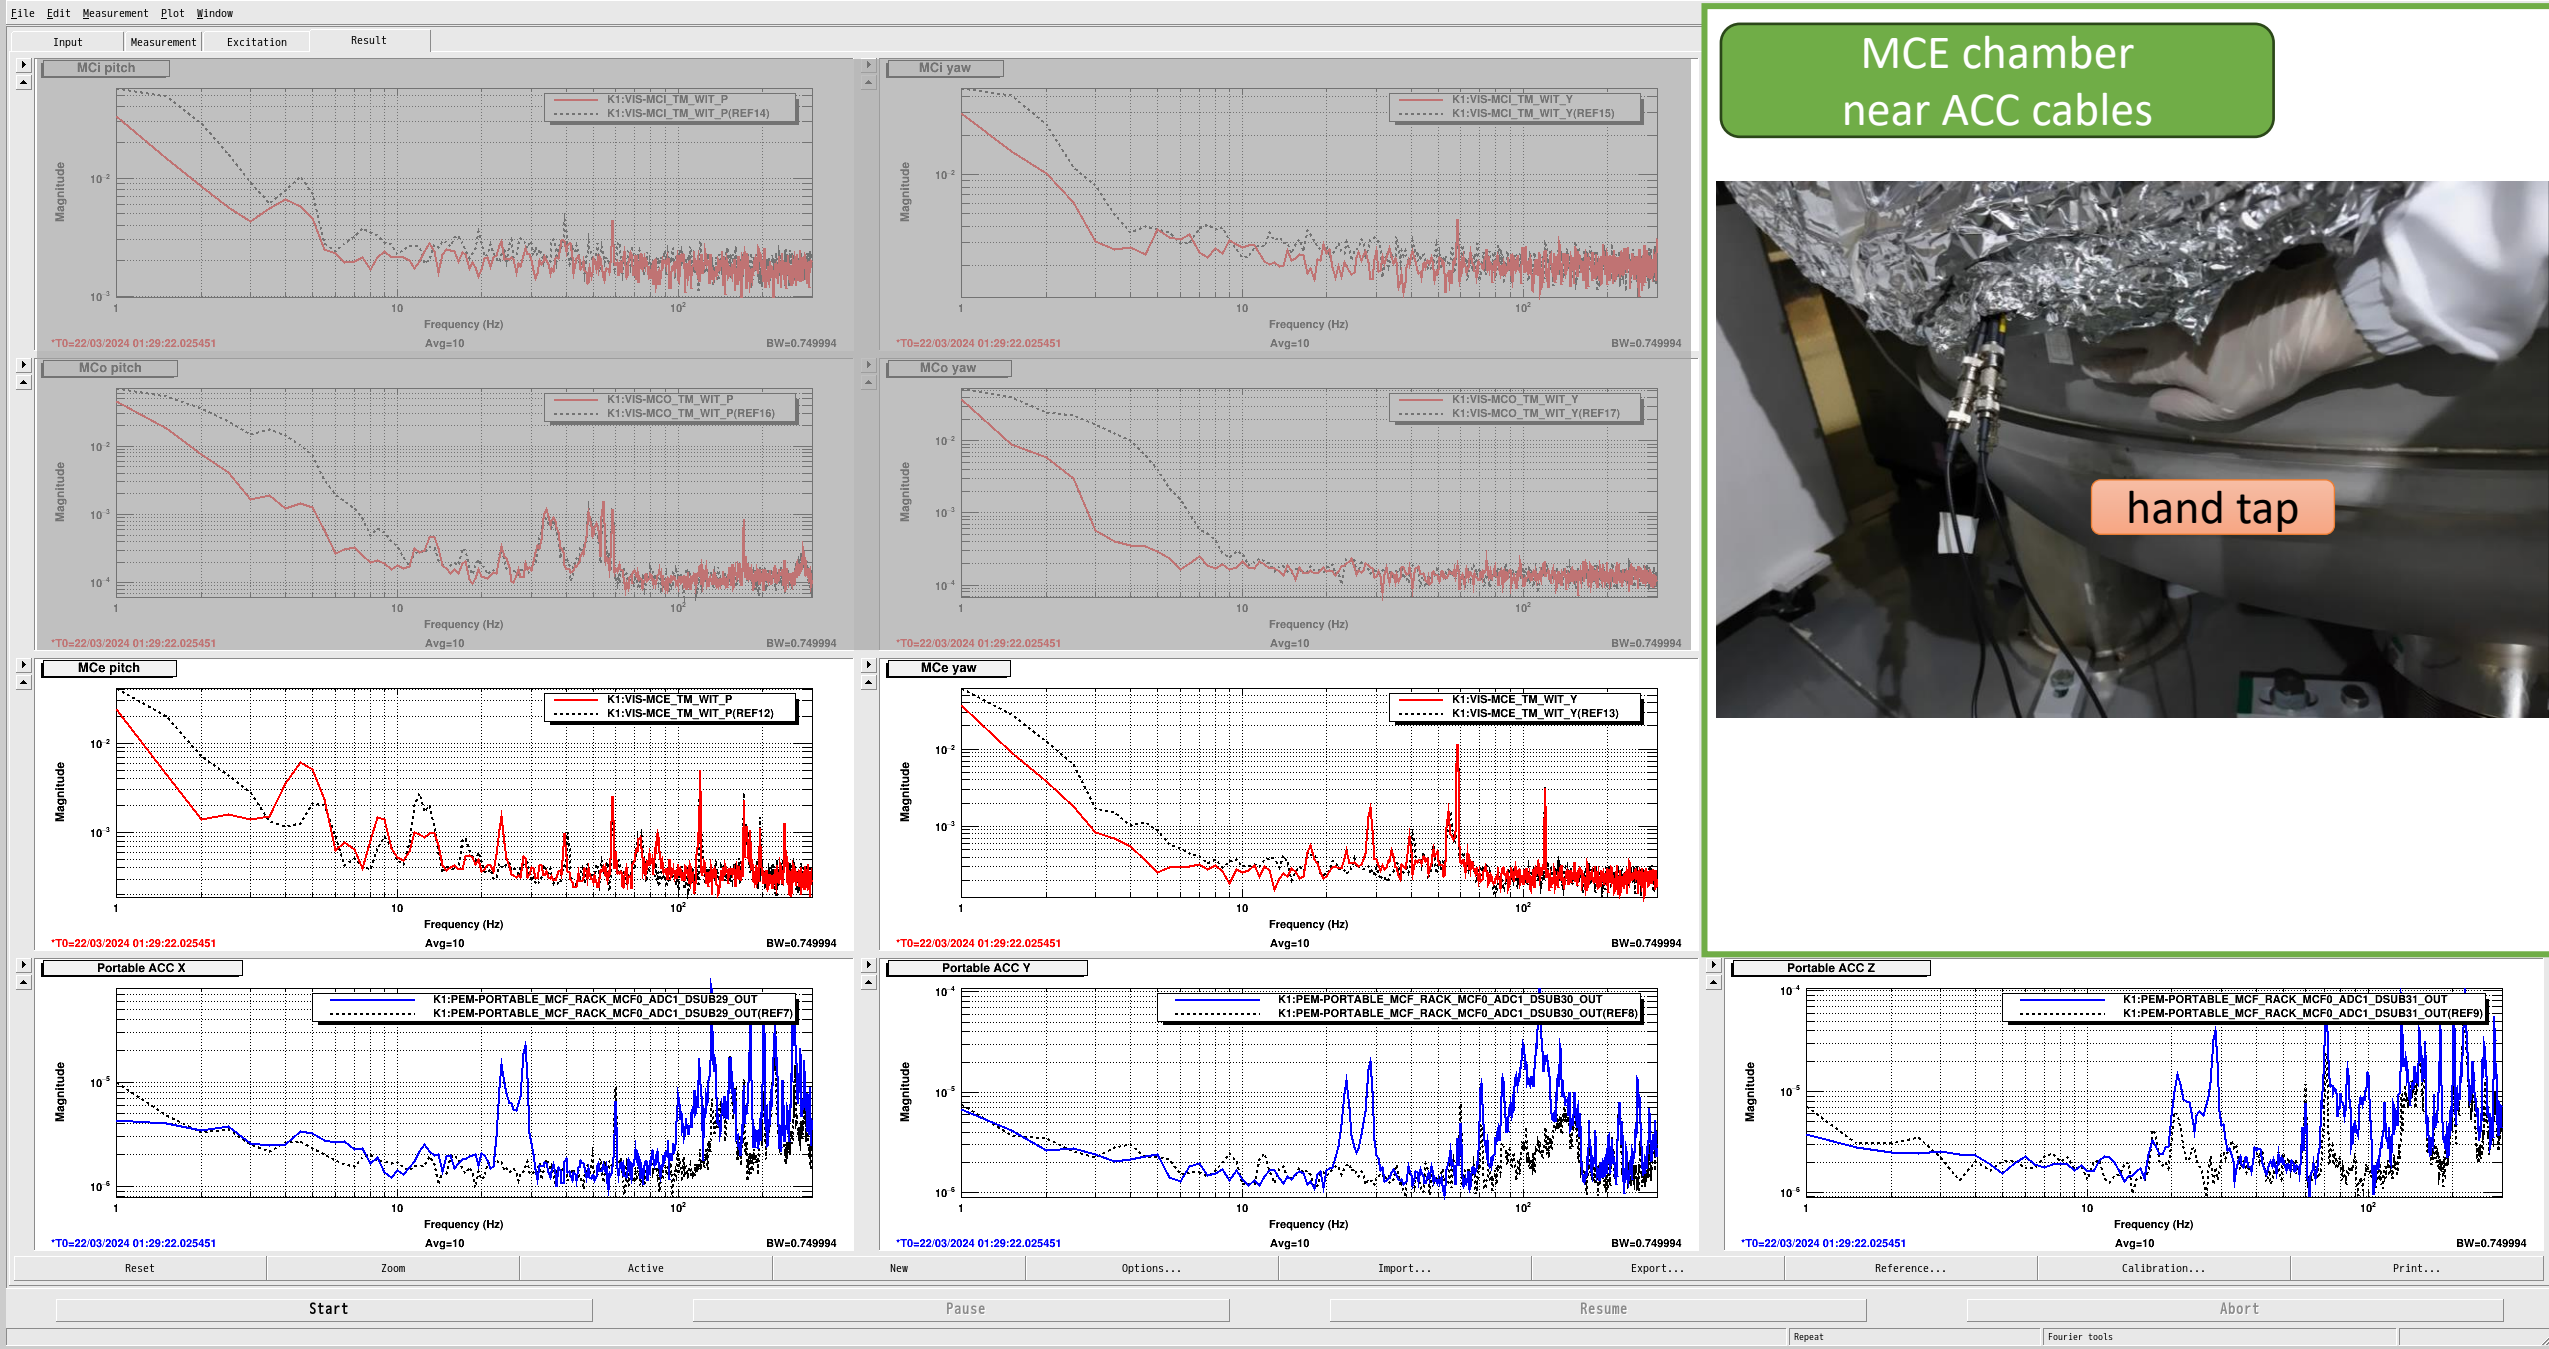


MCE chamber near ACC cables




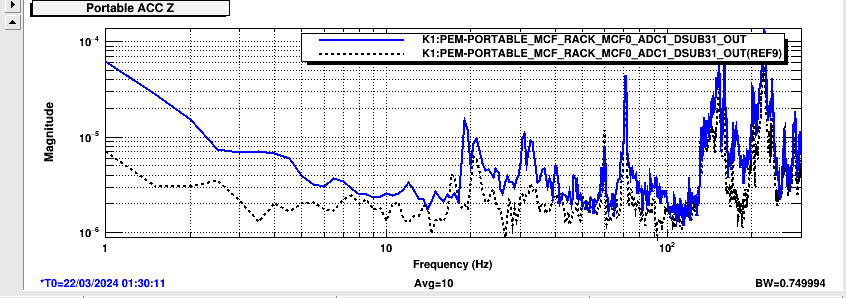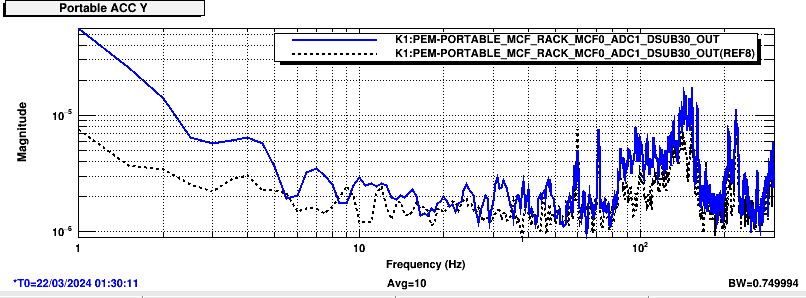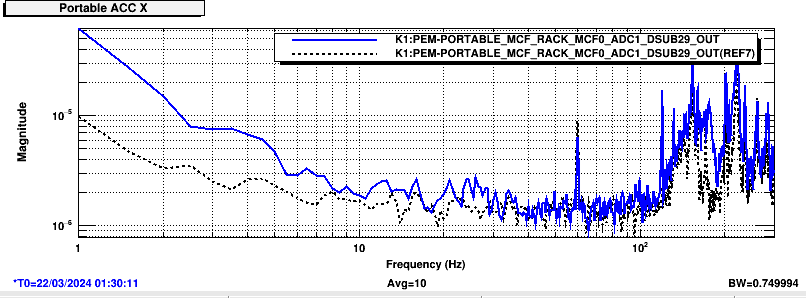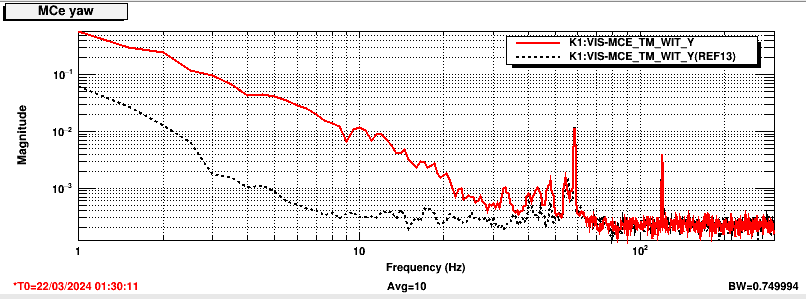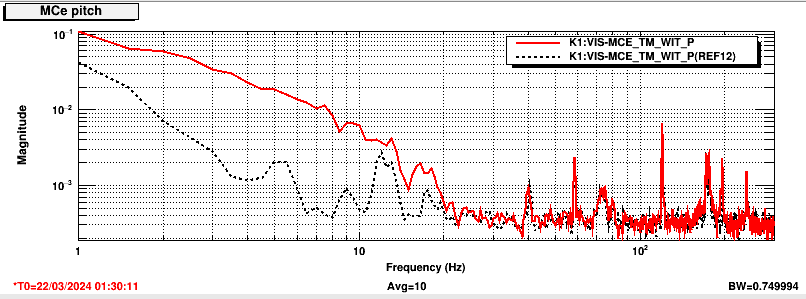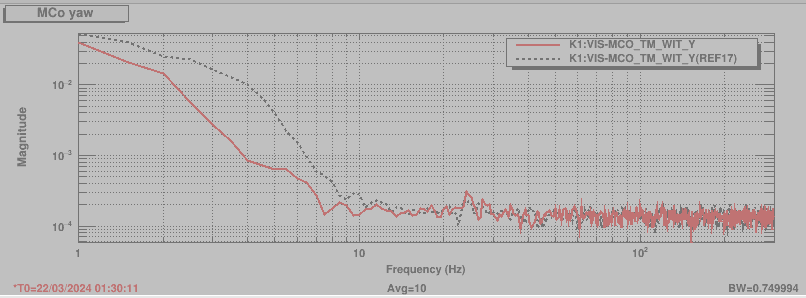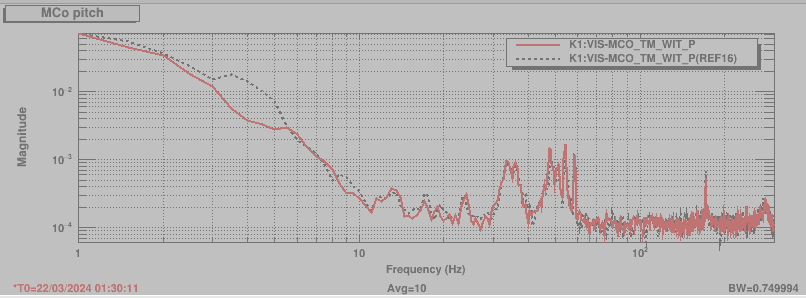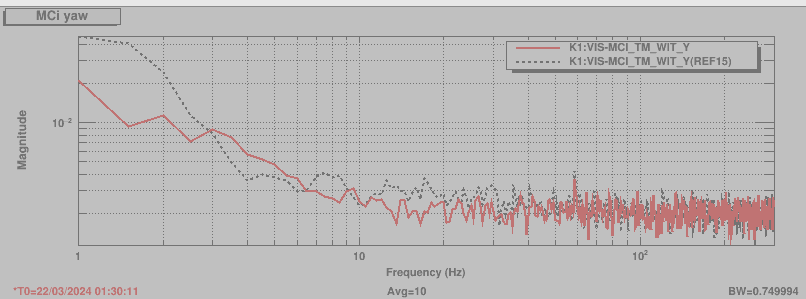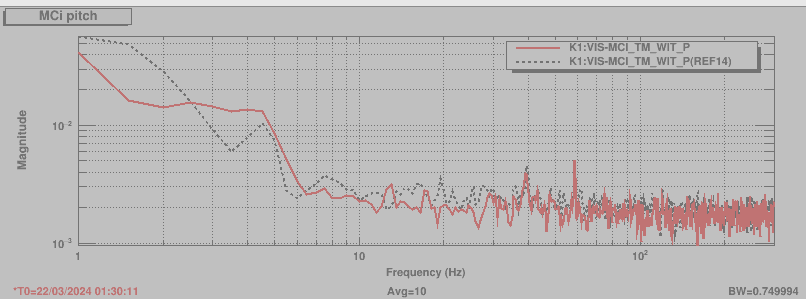

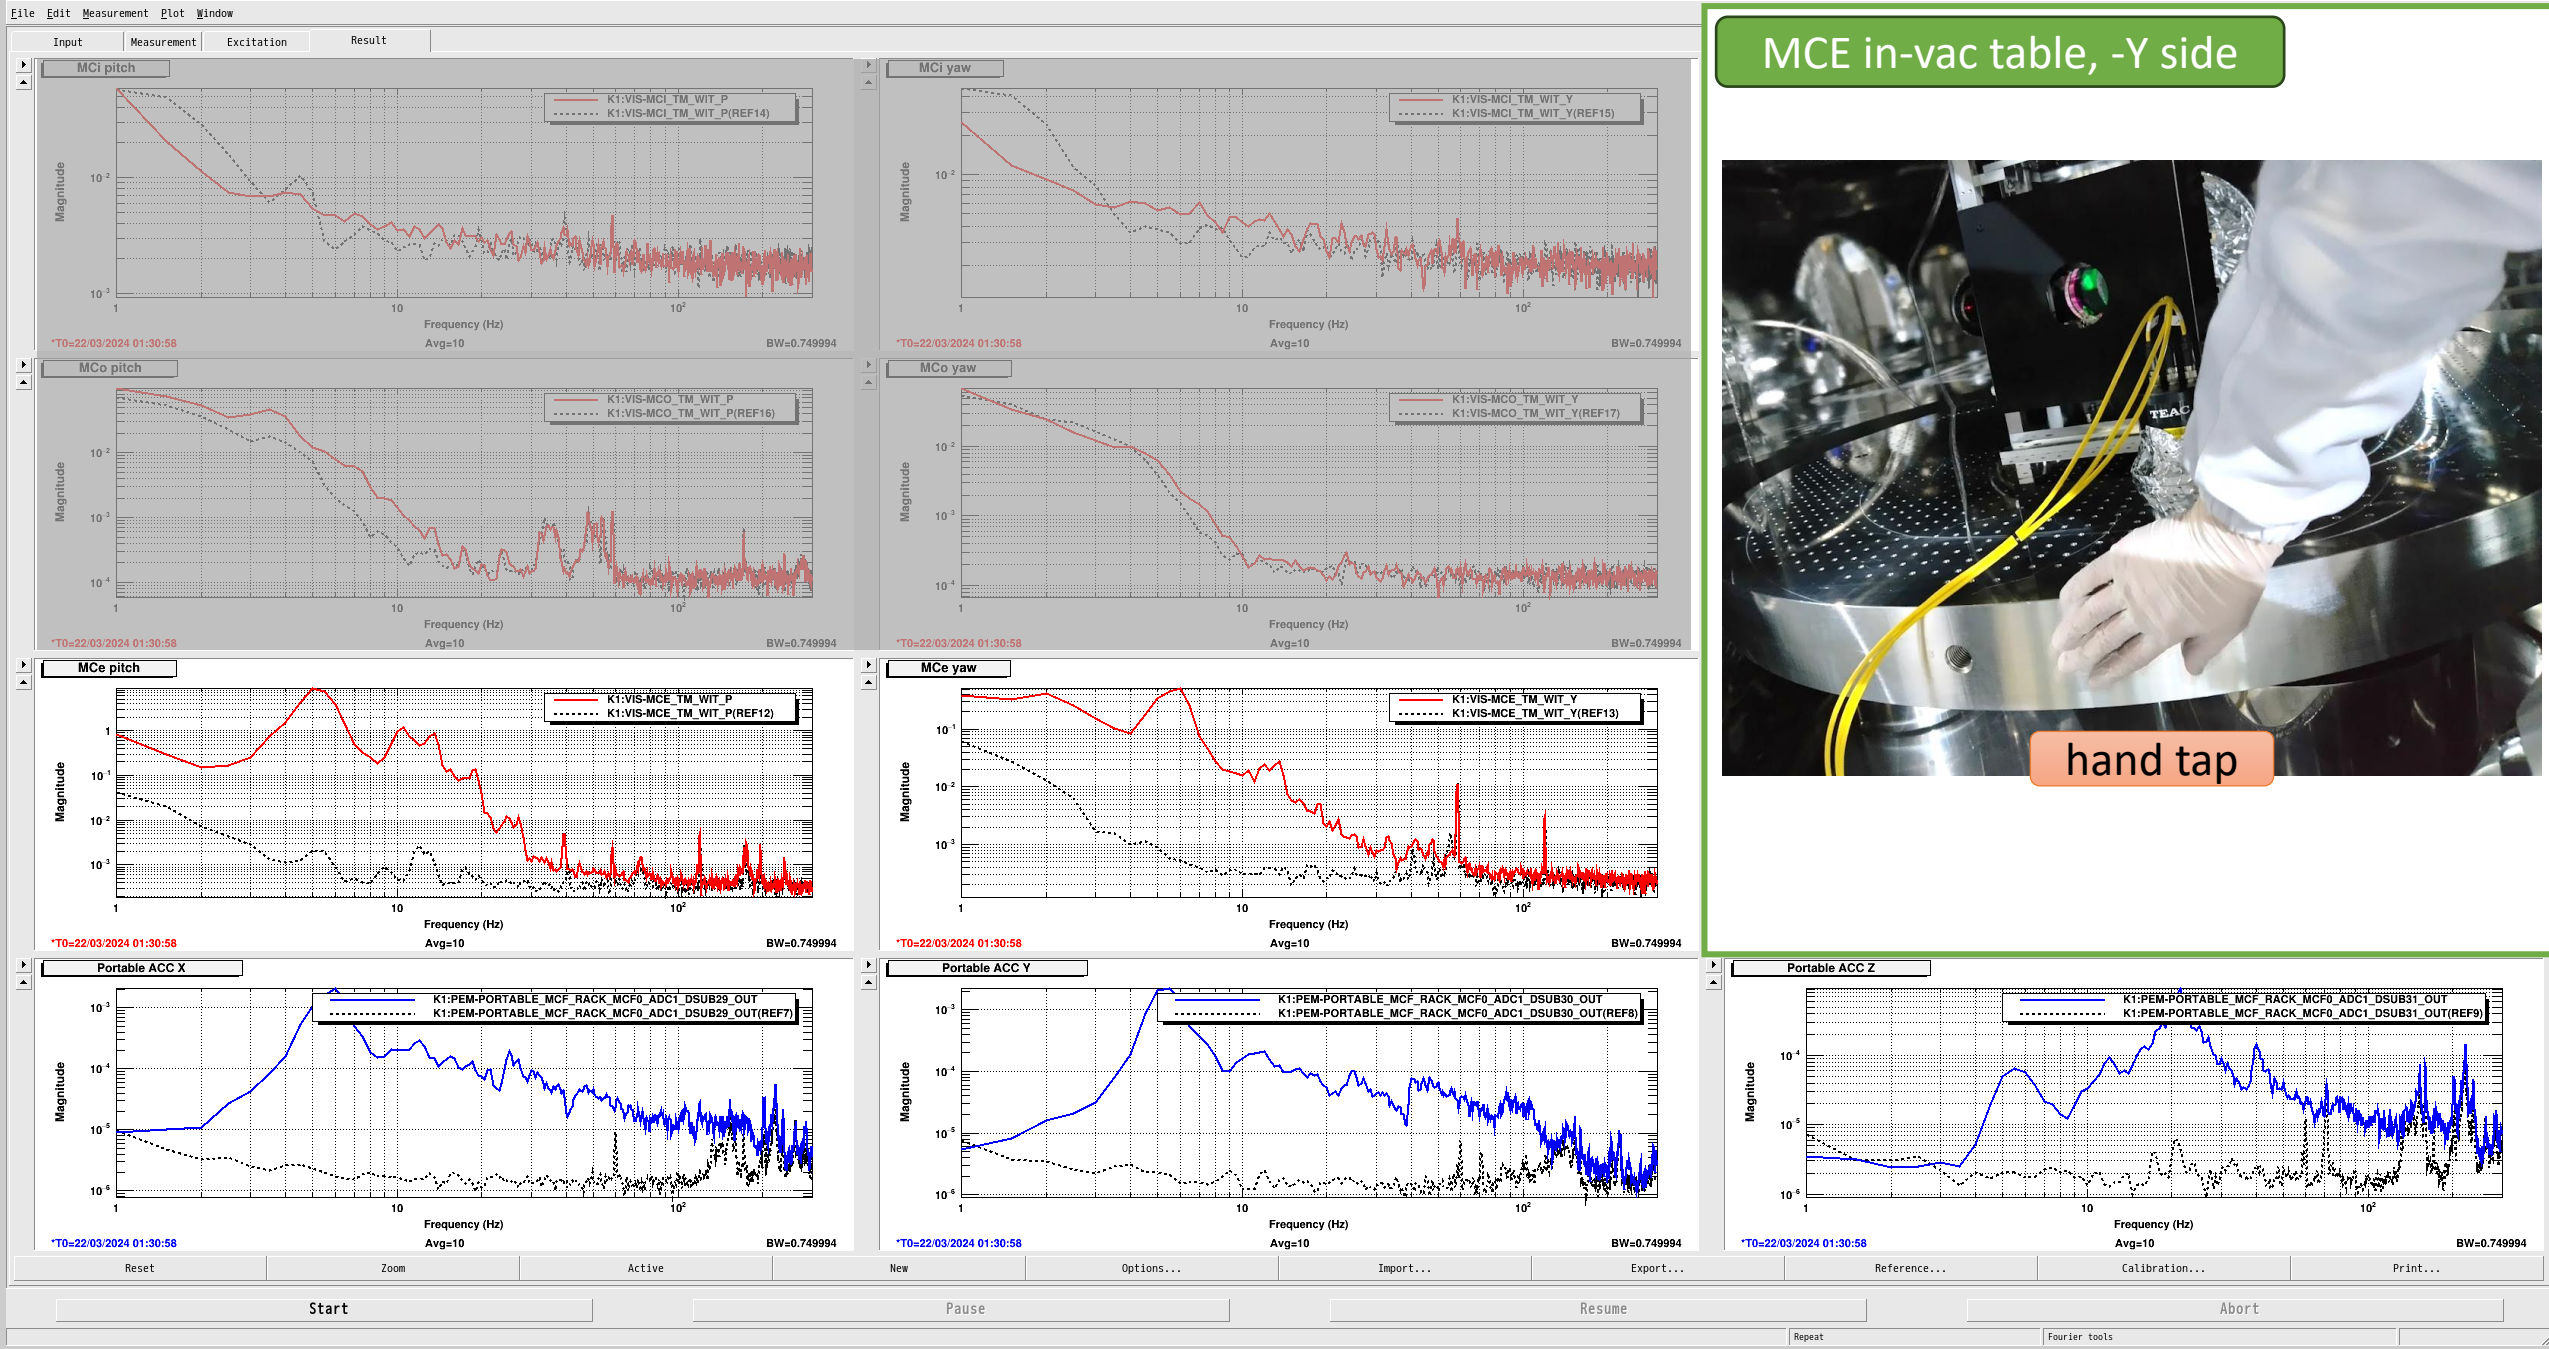


MCE in-vac table, -Y side

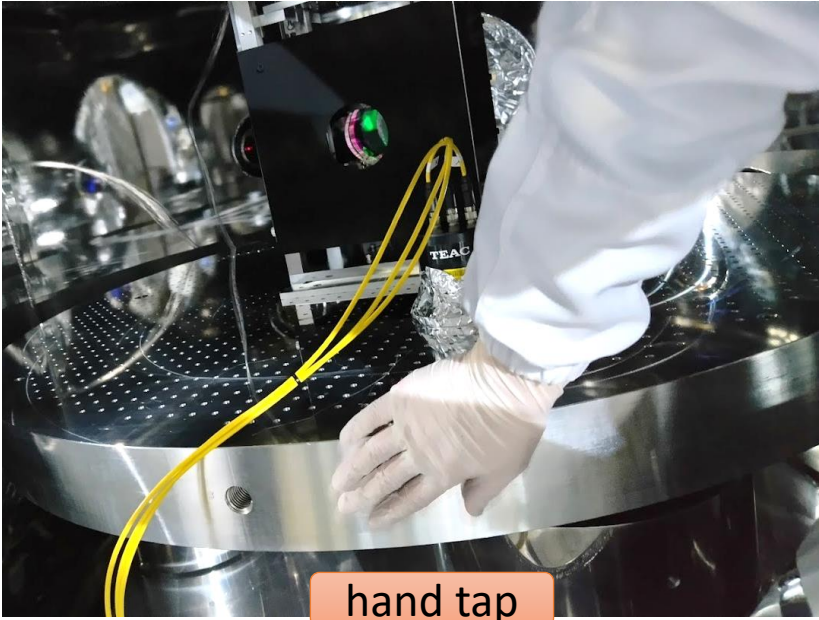

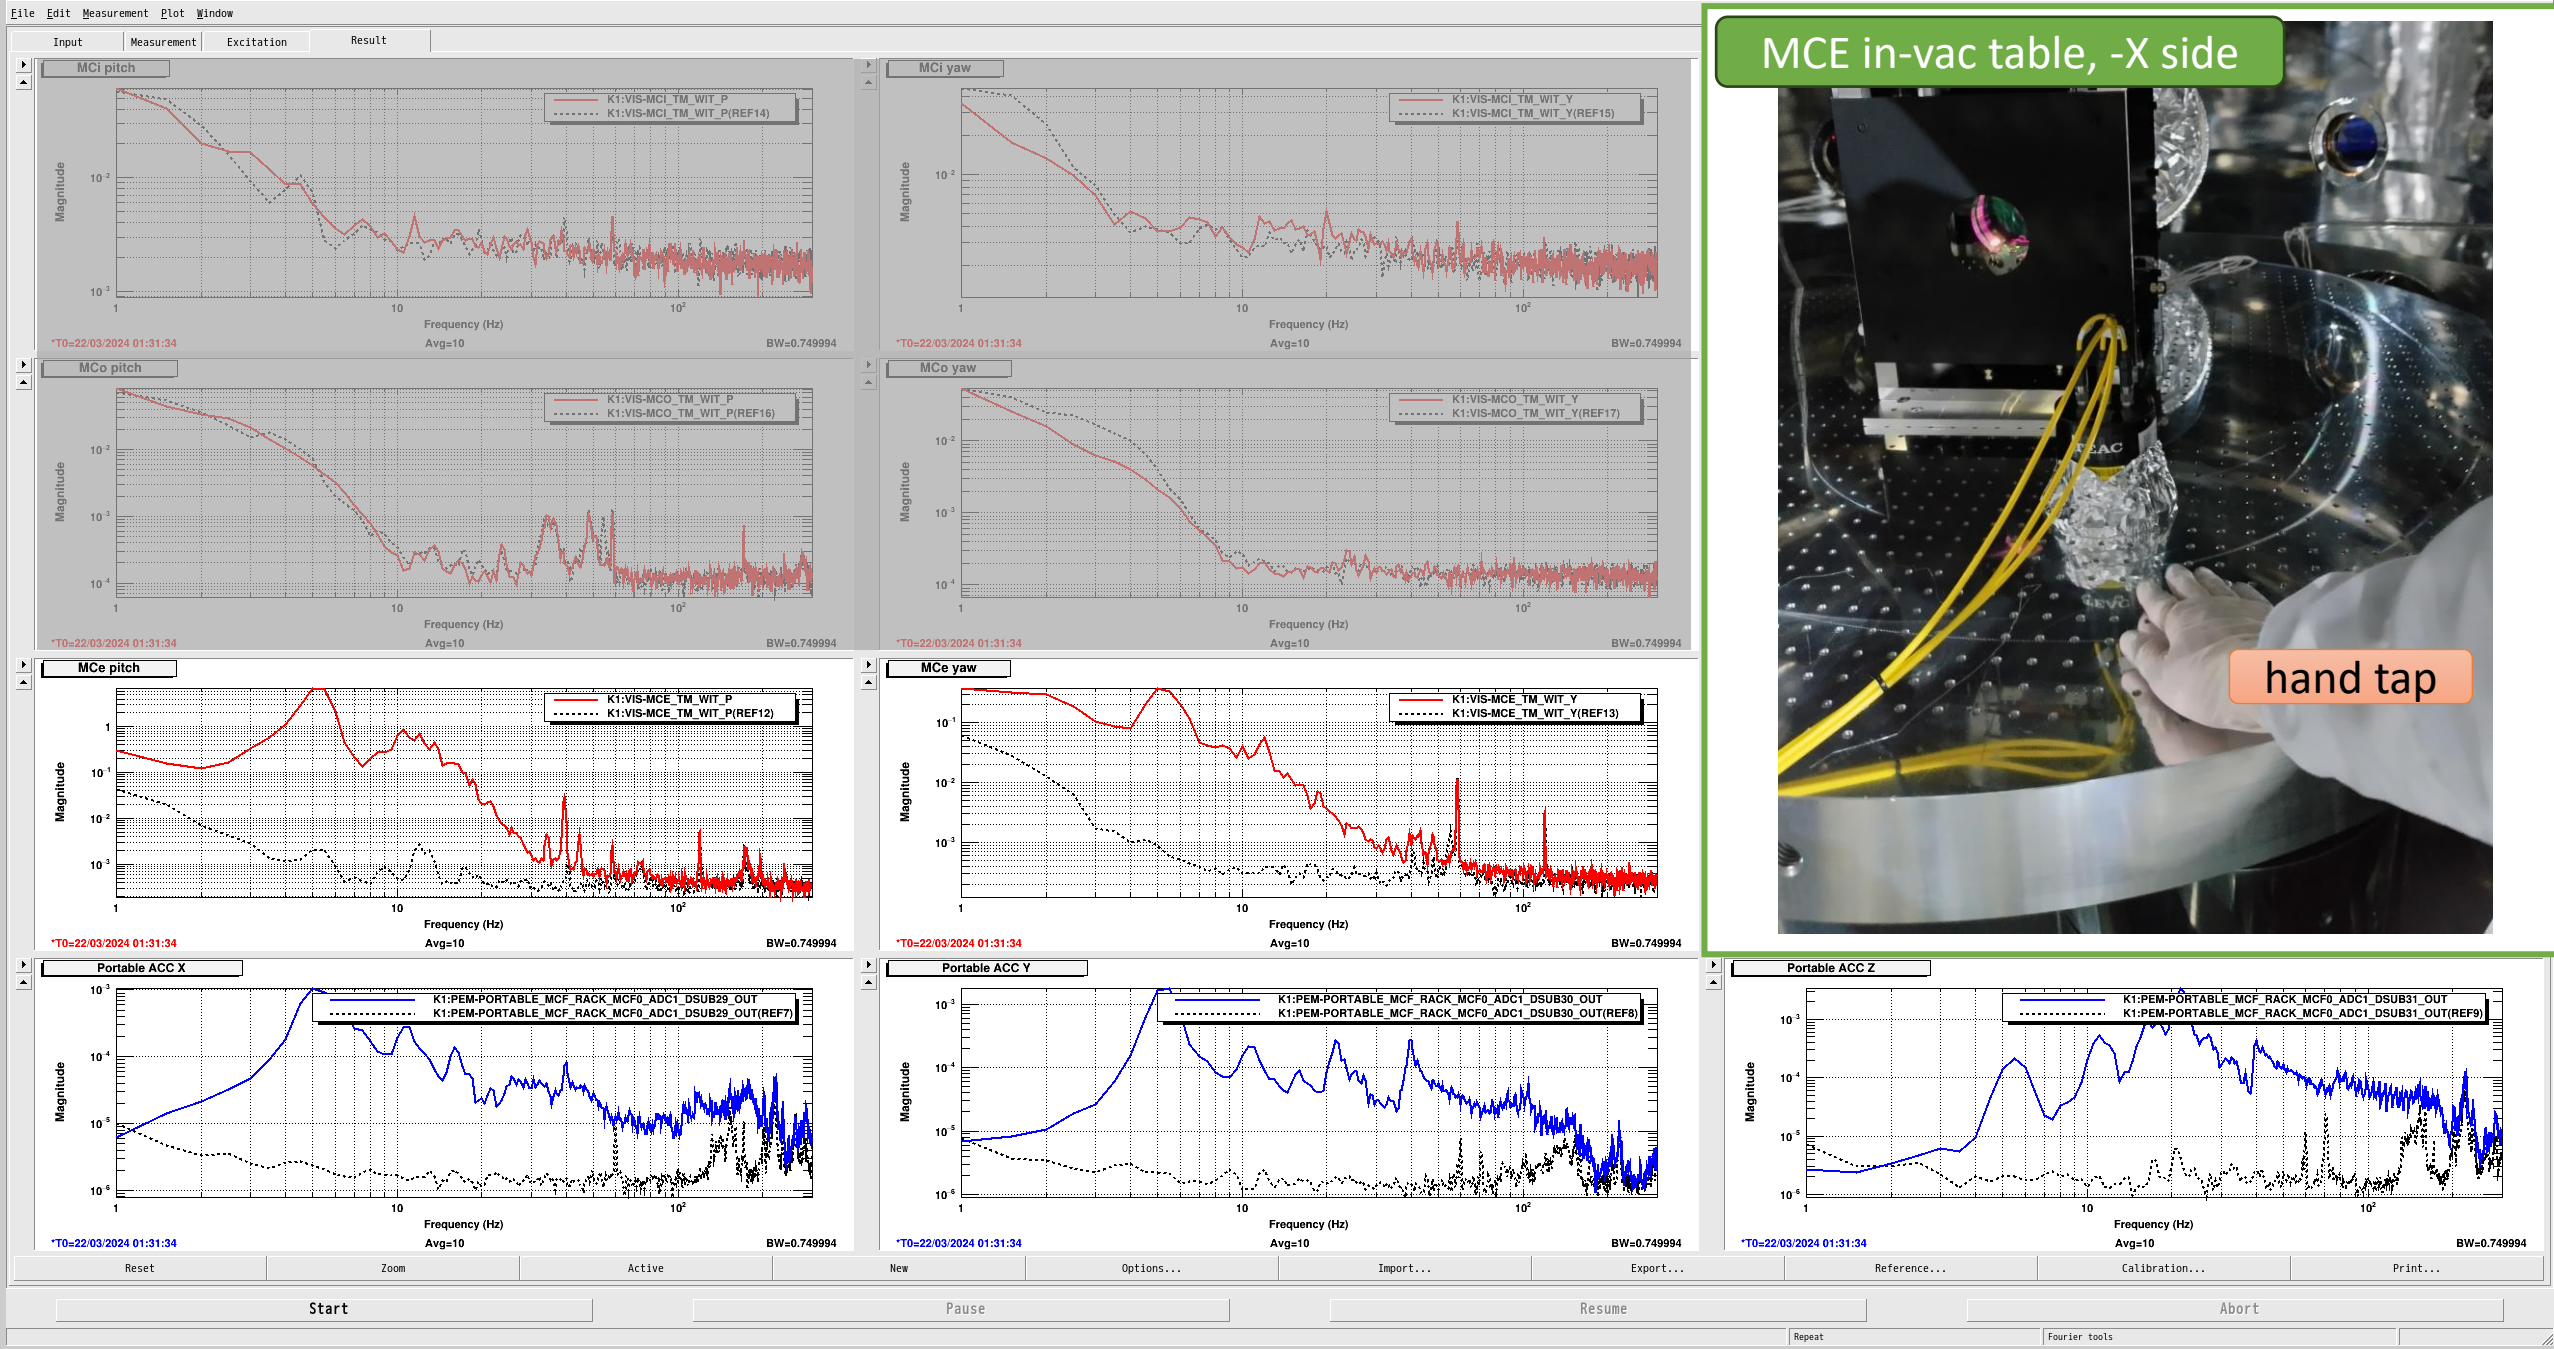

MCE in-vac table, -X side

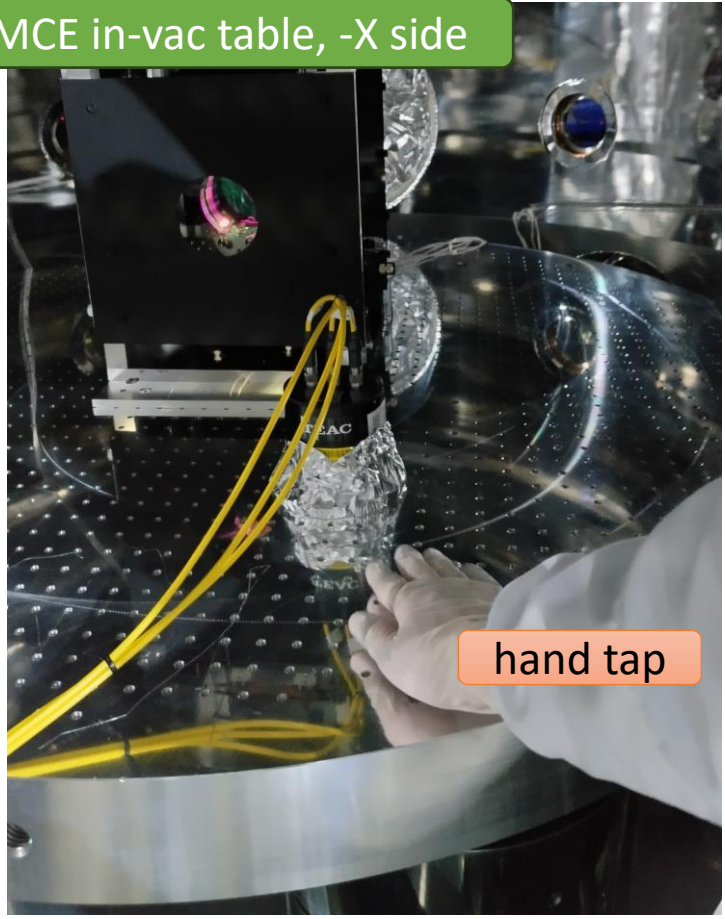

hand tap

